
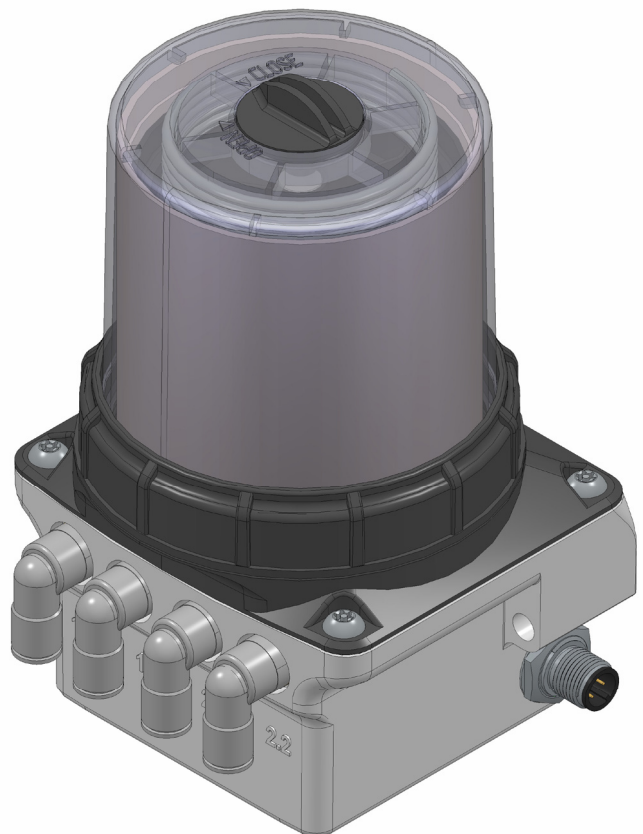


# User Manual

## FlexxPump 250/400 DLS

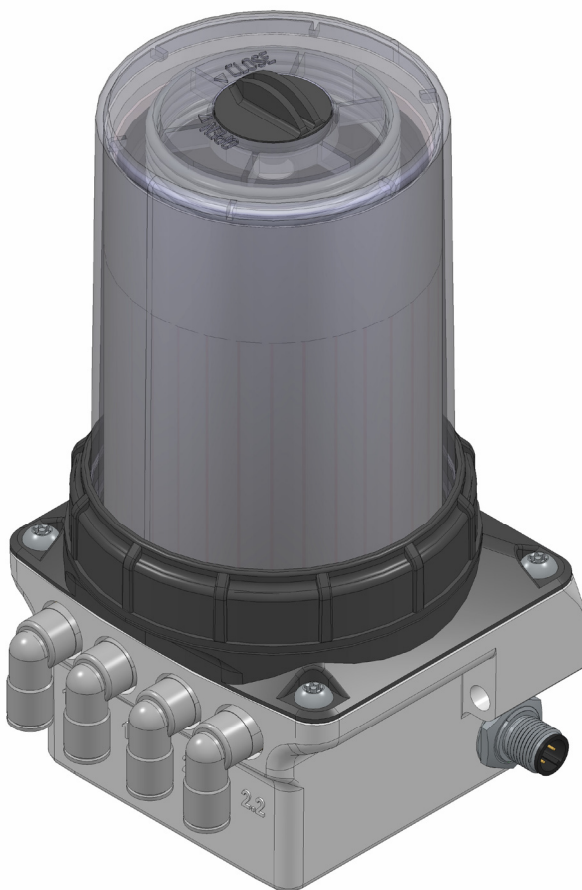

## **I. Revision history & Imprint**

### **I.I Revision history**

The present user manual is the original user manual.

This user manual is only valid for

**Product:**

Product designation: FlexxPump 250/400 DLS

Product revision: ---

**User manual:**

date of creation: 09.2020

revision of the user manual: 1

This document is protected by copyright.

All rights for layout, content, texts and corporate design are reserved by

DLS Schmiersysteme GmbH, © 2020.

All rights, including those of photomechanical reproduction, duplication and distribution by means of special processes (e.g. data processing, data carriers and data networks), even in part and/or in extracts, are reserved by DLS Schmiersysteme GmbH.

The content and technical specifications are subject to change without notice.

### **I.II Imprint of the manufacturer, distribution and service**

Adress:

DLS Schmiersysteme GmbH

Gewerbering 5

D-82140 Olching

Tel: +49 - (0)8142 - 650 69-0

Fax: +49 - (0)8142 - 650 69-29

E-Mail: [mail@DLS-Schmiersysteme.de](mailto:mail@DLS-Schmiersysteme.de)

Internet: [www.DLS-Schmiersysteme.de](http://www.DLS-Schmiersysteme.de)

Personally liable company: DLS Schmiersysteme GmbH

Registered office of the company:

Olching

Handelsregister München

HRB 156604

USt.-idNr.: DE128578324

Managing director: Reiner Hochholzer  
Helmut Feicht

## I.III Table of contents

| Chapter   | Content   | Page      |
|-----------|---|-----------|
| <b>I.</b> | <b>Revision history &amp; Imprint</b>                 | <b>02</b> |
| I.I       | Revision history                                      | 02        |
| I.II      | Imprint of the manufacturer, distribution and service | 02        |
| I.III     | Table of contents                                     | 03        |
| <b>1.</b> | <b>General information about this manual</b>          | <b>05</b> |
| 1.1       | Signal words  | 05        |
| 1.2       | Warning symbols                                       | 06        |
| 1.3       | Structure of the safety instructions                  | 06        |
| 1.4       | Symbols for information                               | 06        |
| <b>2.</b> | <b>Safety</b>   | <b>07</b> |
| 2.1       | EC/EU Directive                                       | 07        |
| 2.2       | Hazards   | 07        |
| 2.3       | Staff   | 07        |
| 2.4       | Reasonably predictabel misuse                         | 07        |
| 2.5       | Usage for the intended purpose                        | 08        |
| 2.6       | Warranty and Liability                                | 08        |
| 2.7       | General safety instructions                           | 09        |
| <b>3.</b> | <b>Description of function</b>                        | <b>10</b> |
| 3.1       | General information                                   | 10        |
| 3.2       | Nameplate and designation                             | 11        |
| 3.3       | Scope of delivery                                     | 11        |
| 3.4       | Technical data  | 12        |
| <b>4.</b> | <b>Transport and storage</b>                          | <b>13</b> |
| 4.1       | Packaging   | 13        |
| 4.2       | Transport   | 13        |
| 4.3       | Storage   | 13        |
| <b>5.</b> | <b>Variants</b>                                       | <b>14</b> |
| 5.1       | FlexxPump 411 DLS / FlexxPump 211 DLS                 | 14        |
| 5.2       | FlexxPump 412 DLS / FlexxPump 212 DLS                 | 15        |
| 5.3       | FlexxPump 422 DLS / FlexxPump 222 DLS                 | 16        |
| 5.4       | FlexxPump 423 DLS / FlexxPump 223 DLS                 | 17        |
| 5.5       | FlexxPump 424 DLS / FlexxPump 224 DLS                 | 18        |
| <b>6.</b> | <b>Mounting</b>                                       | <b>19</b> |
| 6.1       | Preparations  | 19        |
| 6.2       | Assembly  | 19        |

| <b>Chapter</b> | <b>Content</b>   | <b>Page</b> |
|----------------|--|-------------|
| 6.3            | Commissioning  | 23          |
| <b>7.</b>      | <b>Operation and settings</b>                            | <b>24</b>   |
| 7.1            | General information                                      | 24          |
| <b>8.</b>      | <b>Input and output signals - External control (PLC)</b> | <b>25</b>   |
| 8.1            | Pin assignment - External control (PLC)                  | 25          |
| 8.2            | Input signals - External control (PLC)                   | 26          |
| 8.2.1          | Control signal 2 seconds                                 | 27          |
| 8.2.2          | Control signal 5 seconds                                 | 29          |
| 8.2.3          | Control signal 8 seconds                                 | 31          |
| 8.2.4          | Control signal 12 seconds                                | 33          |
| 8.2.5          | Control signal 14 seconds                                | 35          |
| 8.3            | Output signals - External control (PLC)                  | 37          |
| 8.3.1          | Empty level  | 38          |
| 8.3.2          | Error Overload   | 40          |
| 8.3.3          | Error Under- or Overvoltage                              | 41          |
| 8.3.4          | Critical error   | 42          |
| <b>9.</b>      | <b>Maintenance and disposal</b>                          | <b>43</b>   |
| 9.1            | Maintenance schedule                                     | 43          |
| 9.1.1          | Visual check   | 43          |
| 9.1.2          | Cleaning   | 44          |
| 9.1.3          | Recommissioning after maintenance                        | 44          |
| 9.2            | Cartridge change   | 45          |
| 9.3            | Disposal   | 48          |
| <b>10.</b>     | <b>Released accessories</b>                              | <b>49</b>   |
| 10.1           | Lubricants   | 50          |
| 10.2           | Tube lengths   | 50          |
| <b>11.</b>     | <b>Appendix</b>  | <b>51</b>   |
| 11.1           | Dimension sheet and installation dimensions              | 51          |
| 11.2           | EC/EU Declaration of conformity                          | 52          |
| 11.3           | Spare parts  | 53          |
| 11.4           | Flowchart Control signal 2 seconds (for PLC)             | 54          |

## 1. General information about this manual

This user manual contains all necessary information to use FlexxPump 250/400 in the DLS version safely and as intended. In the event that supplementary sheets are attached to these instructions, the information and data contained in the supplementary sheets are valid and replace the corresponding information in this user manual. Any contradictory information contained in this user manual thus becomes invalid.

If you have any questions regarding special applications, please contact DLS Schmiersysteme GmbH (chapter I.II).

The actual and factual operator must ensure and guarantee that these instructions, including any supplementary sheets, have been read and understood by all persons responsible for the installation, operation or maintenance of the FlexxPump 250/400 DLS. Therefore, keep these instructions in a suitable place, ideally in an easily accessible place, in the surrounding area of the FlexxPump 250/400 DLS. Inform your colleagues who work in the local area of the machine about safety instructions so that nobody gets hurt.

This manual was written in German, all other language versions are translations of this manual.

### 1.1 Signal words

The following signal words are used in this manual to draw your attention to possible dangers, prohibitions and other important information:

#### **DANGER**

This signal word points you to an immediate and threatening risk of serious injury or death.

#### **WARNING**

This signal word indicates a potentially imminent danger which can result in serious injury or even death.

#### **CAUTION**

This signal word indicates a potentially imminent danger that can result in minor to severe injuries.

#### **NOTICE**




This signal word indicates a potentially imminent danger which can result in damage to property.

#### **INFORMATION**

This signal word refers to practical application tips or particularly important information when using the FlexxPump 250/400 DLS.


1.2      **Warning symbols**

The following warning symbols are used in this user manual to alert you to hazards, prohibitions and important information:

|   |   |   |
|---|---|---|
|  |  |  |
| General warning sign  | Electricity hazard  | Flammable material  |

1.3      **Structure of the safety instructions**

The safety instructions in this user manual are structured according to the following system:

|  |   |
|--|---|
|  | <b>CAUTION</b>  |
|  | <p>The text explains the consequences of disregarding the reference.</p> <ul style="list-style-type: none"><li>■ The text shows what to do as an instruction.</li></ul> |

1.4      **Symbols for information**

The following information symbols are used in the text and instructions in this manual:

- Requests you to take action
- ➡ Shows the consequences of an action
- ⓘ Additional information about the action

## **2. Safety**

All persons working with the FlexxPump 250/400 DLS must follow these operating instructions, in particular the safety instructions and the rules and regulations applicable at the place of use. Generally applicable legal regulations and other rules as well as the relevant rules and regulations for accident prevention (e.g. Personal Protective Equipment (PPE)) and environmental protection must be observed.

### **2.1 EC/EU Directive**

Within the scope of the EC/EU Directive, (re)commissioning of a machine on which the FlexxPump 250/400 DLS has been installed and/or fitted is prohibited until it has been clearly established that the machine complies with the provisions of the applicable Directive.

An EC/EU declaration of conformity for the FlexxPump 250/400 DLS can be found in the appendix (chapter 11.2).

### **2.2 Hazards**

In order to avoid danger to the user or damage to the machine on which the FlexxPump 250/400 DLS is used, the FlexxPump 250/400 DLS may only be used for its intended purpose (chapter 2.5) and in a technically safe condition.

Always inform yourself about the general safety instructions (chapter 2.7) before starting to work.

### **2.3 Staff**

Only qualified staff who has read and understood this manual may work with the FlexxPump 250/400 DLS. Local and/or company regulations apply accordingly.

### **2.4 Reasonably predictable misuse**

Any use of the FlexxPump 250/400 DLS which exceeds the maximum permissible technical data is generally considered to be improper and therefore prohibited.

## 2.5 Usage for the intended purpose

The following points must be observed for the intended purpose of using the FlexxPump 250/400 DLS:

- + The FlexxPump 250/400 DLS is exclusively approved for industrial use.
- + The FlexxPump 250/400 DLS may be used exclusively in accordance with the technical data (chapter 3.4).
- + Unauthorized structural alterations to the FlexxPump 250/400 DLS are not permitted.
- + Read the user manual and act accordingly.
- + During operation of the FlexxPump 250/400 DLS, a visual inspection of the FlexxPump 400/200 DLS as well as of the lubrication point must be carried out regularly. Any anomalies must be eliminated immediately and the cause rectified.
- + Refilling the cartridge is not permitted.
- + The FlexxPump 250/400 DLS may not be opened or disassembled.
- + Only lubricants approved by the manufacturer may be used.
- + Relevant regulations and rules on work safety, accident prevention and environmental protection must be observed.
- + Work and activities with and on the FlexxPump 250/400 DLS are only permitted with appropriate authorisation (chapter 2.3).

All other uses than the aforementioned intended usage or the disregard of one of the above points shall be deemed improper usage. In this case no liability and/or warranty is assumed.

## 2.6 Warranty and Liability






If the following items are disregarded, all warranty and liability claims for personal injury and/or damage to property are excluded:

- + Non-observance of the instructions for transport and storage;
- + misuse;
- + Improper or unperformed maintenance or repair work;
- + Improper assembly / disassembly or improper operation;
- + Operation of the FlexxPump 250/400 DLS with defective protective devices and devices;
- + Operation of the FlexxPump 250/400 DLS without lubricant;
- + Operation of the FlexxPump 250/400 DLS with non-approved lubricant;
- + Operation of heavily contaminated FlexxPump 250/400 DLS;
- + Modifications or alterations which may be carried out without the written permission of DLS Schmiersysteme GmbH have taken place;
- + Opening and/or partial or complete disassembly of the FlexxPump 250/400 DLS.



## 2.7 General safety instructions

The following safety instructions are given for the FlexxPump 250/400 DLS:

|   |  |
|---|--|
|    | <b>DANGER</b><br><b>Damaged or incorrect electrical connections or unauthorized live components lead to serious injuries or even death.</b> <ul style="list-style-type: none"><li>■ Have all electrical connection work carried out by qualified personnel only.</li><li>■ Replace damaged cables or plugs immediately.</li></ul>  |
|    | <b>NOTICE</b><br><b>Loose or overloaded screw connections can cause damage to the FlexxPump 250/400 DLS.</b> <ul style="list-style-type: none"><li>■ Mount and check all screw connections with the permissible torques specified for this purpose. Use a calibrated torque wrench.</li></ul>  |
|  | <b>WARNING</b><br><b>Lubricants are flammable.</b> <ul style="list-style-type: none"><li>■ In case of fire, do not use a water jet to extinguish the fire.</li><li>■ In case of fire, use only suitable extinguishing agents such as powder, foam and carbon dioxide.</li><li>■ Observe the relevant safety instructions of the lubricant manufacturer on the safety data sheet of the lubricant used.</li></ul> |
|  | <b>CAUTION</b><br><b>Lubricants can cause skin irritations.</b> <ul style="list-style-type: none"><li>■ Avoid direct skin contact.</li></ul>   |
|  | <b>NOTICE</b><br><b>Lubricants can contaminate soil and water.</b> <ul style="list-style-type: none"><li>■ Use and dispose lubricants properly.</li></ul>  |

### 3. Description of function

#### 3.1 General information

The FlexxPump 250/400 DLS is designed as an extremely compact double piston pump for autonomous operation with grease as the lubricant. The pistons run force-controlled and counter-rotating. The FlexxPump 250/400 DLS is available as a version with one, two, three or four lubricant outlets, see Chapter 5. The outlets are secured by an integrated non-return valve. Approx. 0.16 cm<sup>3</sup> of lubricant is pumped during each dispensing operation; multiple dispensers can be set one after the other.

The present FlexxPump4 as D version has to be integrated into an external control (e.g. PLC). The FlexxPump 250/400 DLS has an electrical interface with which you can control and command the FlexxPump 250/400 DLS. Furthermore, the FlexxPump 250/400 DLS enables remote monitoring by output signals in order to be able to query the status and possible error messages (e.g. empty cartridge). By means of various input signals processed by the microelectronics, the FlexxPump 250/400 DLS is controlled to supply the lubrication point with the ideal amount of lubricant.

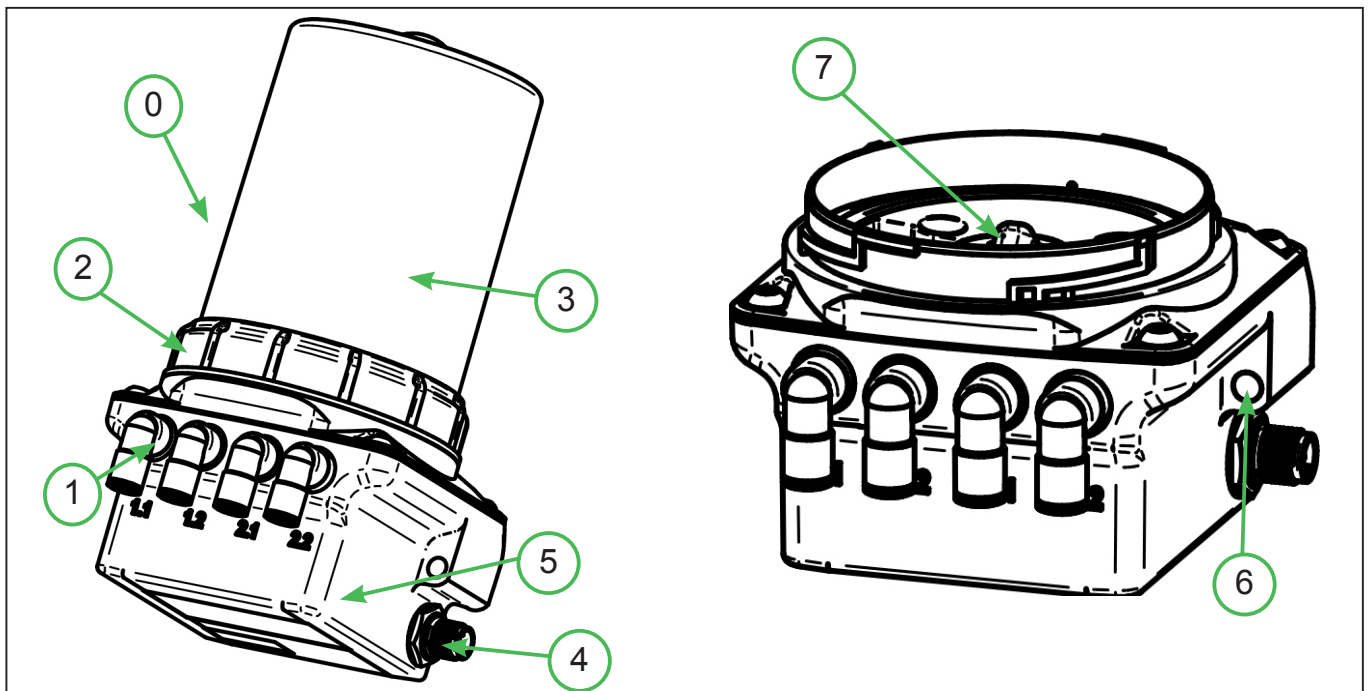


Fig. 1: Overview FlexxPump 250/400 DLS

| Nr. | Description   |
|-----|---|
| 0   | FlexxPump 250/400 DLS                                   |
| 1   | Lubricant outlet, outlets (different versions possible) |
| 2   | Retaining ring  |
| 3   | Housing   |
| 4   | M12x1 electrical interface                              |
| 5   | Nameplate with designation, CE mark and serial number   |
| 6   | Through hole for assembly                               |
| 7   | Lubricant inlet with thread for cartridge               |

## **3.2 Nameplate and designation**

The nameplate of the FlexxPump 250/400 DLS is visibly attached to the side of the pump itself. There the CE mark and the serial number of the FlexxPump 250/400 DLS are visible. Refer to chapter 3.1, Fig. 1 for the location of the nameplate and serial number.

## **3.3 Scope of delivery**

The FlexxPump 250/400 DLS is available in several different versions. They differ in the design (housing for 250ml cartridge or housing for 400ml cartridge), the number and type of lubricant outlets and the scope of accessories supplied.

### 3.4 Technical data

| Housing   |            |  |                 |
|---|------------|--|-----------------|
| Dimensions without housing                                |            | 111 x 56,5 x 108 (W x H x D)                                   | mm              |
| Dimensions with housing for 250ml cartridge               |            | 111 x 165 x 108 (W x H x D)                                    |                 |
| Dimensions with housing for 400ml cartridge               |            | 111 x 198,5 x 108 (W x H x D)                                  |                 |
| Weight (without cartridge)                                | appx.      | 1190 til 1450 (depeding on version)                            | g               |
| Mounting options  |            | holes for screw M6   |                 |
| Mounting position   |            | grease version: any position;<br>oil version: vertical         |                 |
| Material  |            | Zinc die-cast / PA 6.6 GF30 / POM                              |                 |
| Material outlet   |            | Nickel-plated brass  |                 |
| Operating temperature                                     |            | -10 ... +60°   | °C              |
| Lubricant and hydraulics                                  |            |  |                 |
| Cartridge volume  |            | 250 / 400  | ml              |
| Lubricant characteristics                                 |            | grease up to NLGI class 2<br>oil up to 30 000 cSt              |                 |
| Number of outlets   |            | 1 / 2 / 3 / 4  |                 |
| Hydraulic connection                                      |            | via PA-Tube  |                 |
| Number of lubrication points per outlet                   |            | up to 10 in conjunction with aluminum progressive distributor* |                 |
| max. pressure   |            | 70 (-10%/+15%)   | bar             |
| Steady state pressure                                     |            | 70   | bar             |
| Grease delivery   | per stroke | 0.15   | cm <sup>3</sup> |
| Electrics   |            |  |                 |
| Display   |            | nonexistant  |                 |
| Operating voltage   |            | 24 (20V...28V)   | V               |
| Protection  |            | 0,75 (slow blow)   | A               |
| Protection class  |            | IP 54  |                 |
| Current consumption                                       |            | $I_{\max} < 0,3$ $I_{\text{quiescent}} < 0,025$                | A               |
| Further information on electrics can be found in Chap. 8! |            |  |                 |

\* The stated value depends on the specific application and may vary considerably in individual cases depending on the lubricant used and other conditions.

## 4. Transport and storage

### 4.1 Packaging

The FlexxPump 250/400 DLS is delivered in an outer packaging (cardboard box) and - depending on the scope of delivery with a lubricant cartridge and other accessories - in the same package. To protect them from moisture and dirt, they are also packed in PE films.

Dispose the packaging materials at the designated disposal points in compliance with the relevant national and company regulations.

After receiving the FlexxPump 250/400 DLS, check the delivery note for completeness and correctness.

Any missing parts or damage must be reported immediately to the forwarding agent, the insurance company or DLS Schmiersysteme GmbH in writing.

### 4.2 Transport



#### NOTICE

**Hard shocks, e.g. due to falling or setting down too hard, can damage the FlexxPump 250/400 DLS.**

- Do not throw the FlexxPump 250/400 DLS.

### 4.3 Storage


Store the FlexxPump 250/400 DLS in its original packaging in a vertical position in a dry, frost-free environment at an ambient temperature of +5°C to +30°C. The maximum storage time in unopened condition is 2 years.

The so-called "First-In-First-Out-Principle" (FiFo) is recommended for storage logistics.

5. Variants

The FlexxPump 250/400 DLS is designed as a compact central lubrication unit for supplying one or more lubrication points. Depending on the specific application, the FlexxPump 250/400 DLS can also reliably and cleanly supply a limited number of lubrication points with lubricant. In this case, parts of the system accessories from the manufacturer (e.g. splitters, progressive distributors or lubrication gears) can be connected to the FlexxPump 250/400 DLS in order to extend the number of lubrication points beyond the number of outlets. The FlexxPump 250/400 DLS is available as a variant with one or as a variant with two pump bodies. The outlets of pump body (PB) 1 are marked on the housing with 1.1 and 1.2, the outlets of pump body 2 with 2.1 and 2.2.



5.1 FlexxPump 411 DLS / FlexxPump 211 DLS

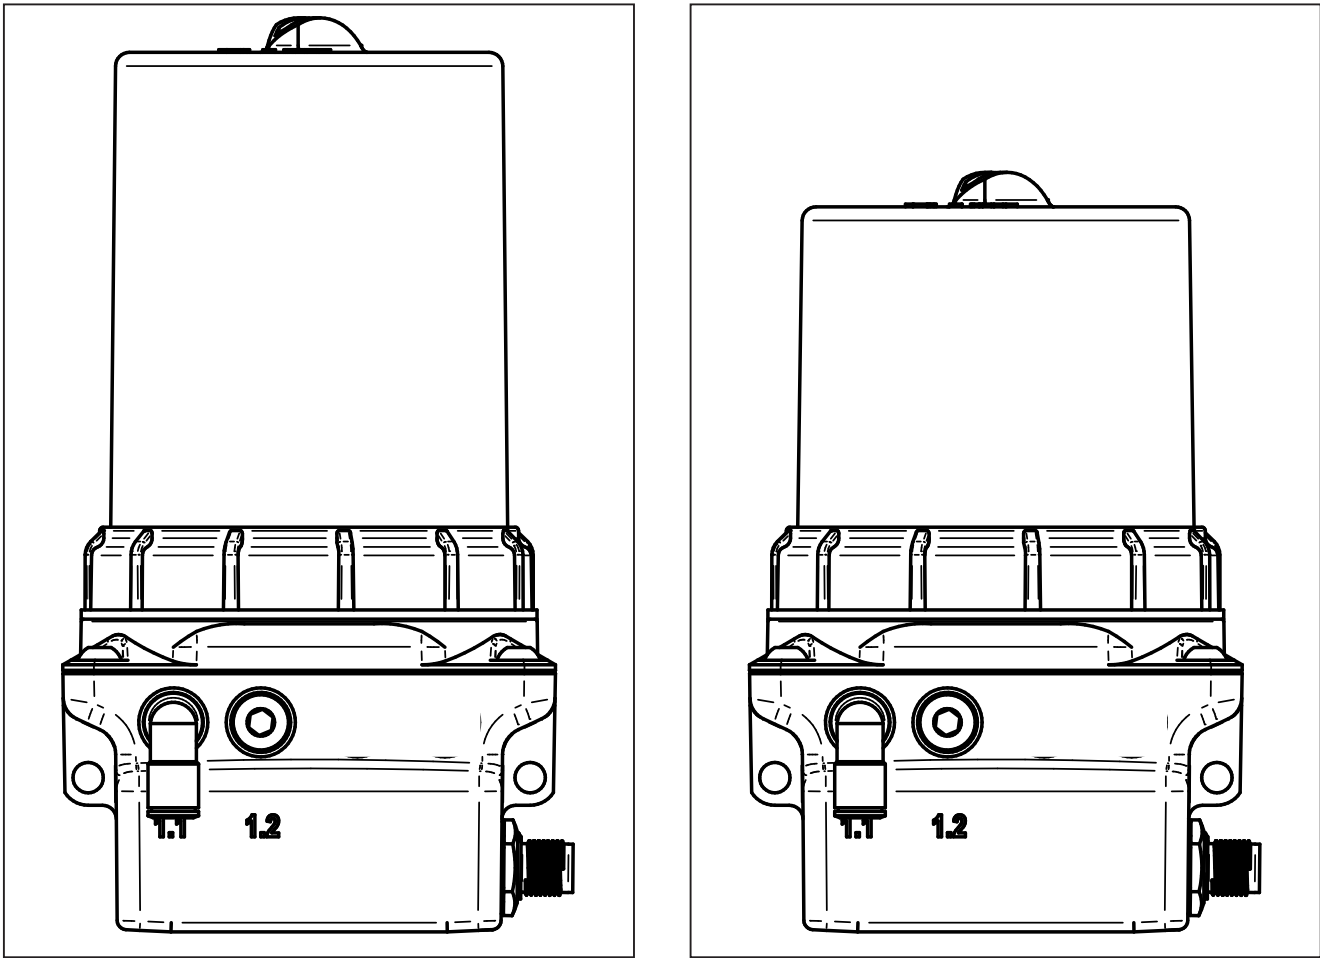

|   |                                       |
|---|---------------------------------------|
| Number of pump units                                | 1                                     |
| Number of outlets                                   | 1                                     |
| Differences in dosing volume per pump unit possible | not applicable, as only one pump unit |

With the FlexxPump 411 DLS or FlexxPump 211 DLS, the theoretical two outlets of the built-in one pump unit are combined internally. The outlet is supplied with 0.15cm<sup>3</sup> lubricant per stroke.



5.2 FlexxPump 412 DLS/ FlexxPump 212 DLS

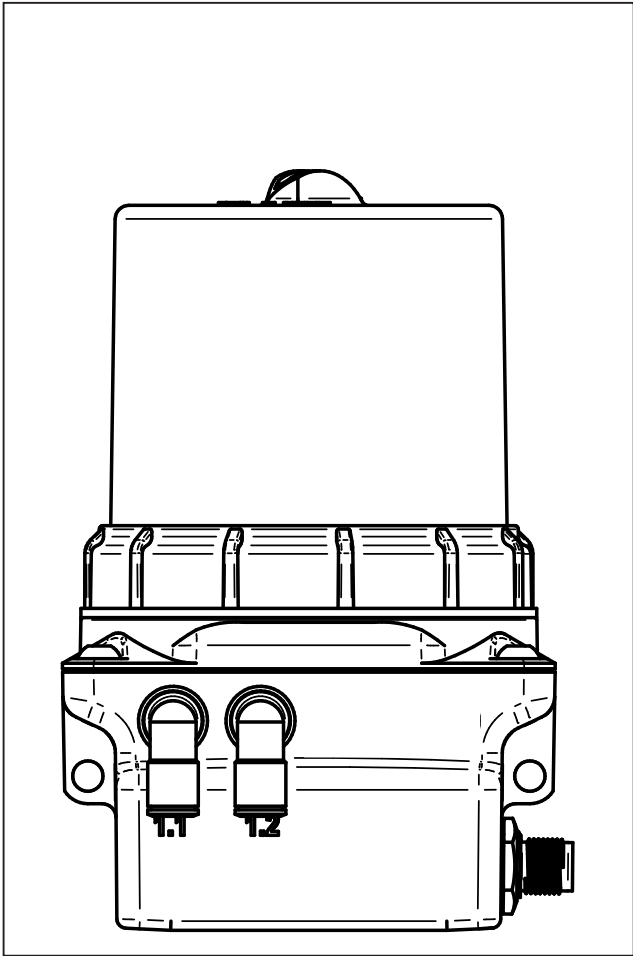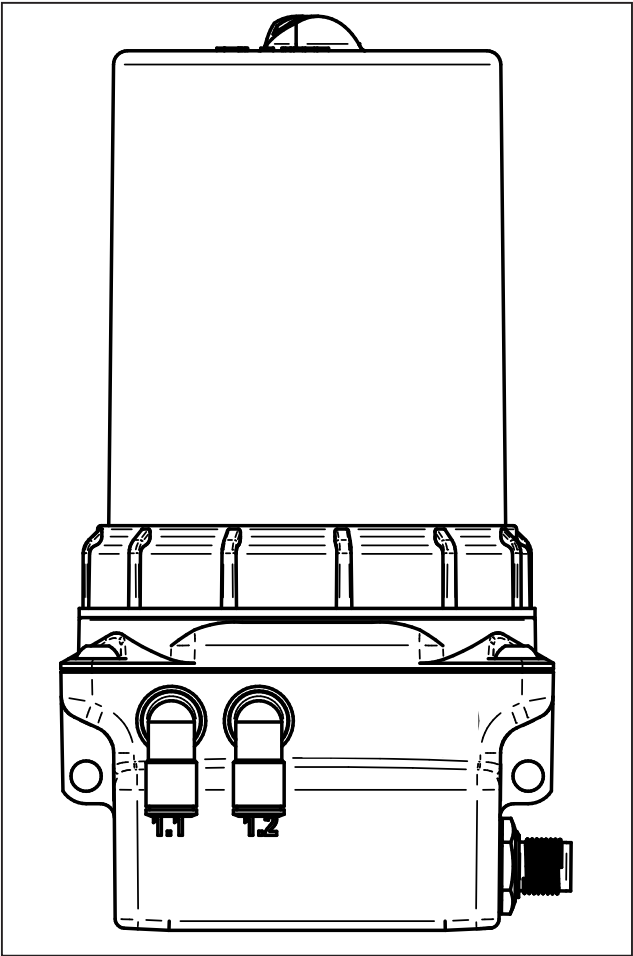

|   |                                       |
|---|---------------------------------------|
| Number of pump units                                | 1                                     |
| Number of outlets                                   | 2                                     |
| Differences in dosing volume per pump unit possible | not applicable, as only one pump unit |

With the FlexxPump 412 DLS or FlexxPump 212 DLS, two outlets are supplied with the same quantity of lubricant. One outlet is supplied with 0.15cm<sup>3</sup> lubricant per stroke. The outlets are supplied with lubricant one after the other.

### 5.3 FlexxPump 422 DLS/ FlexxPump 222 DLS

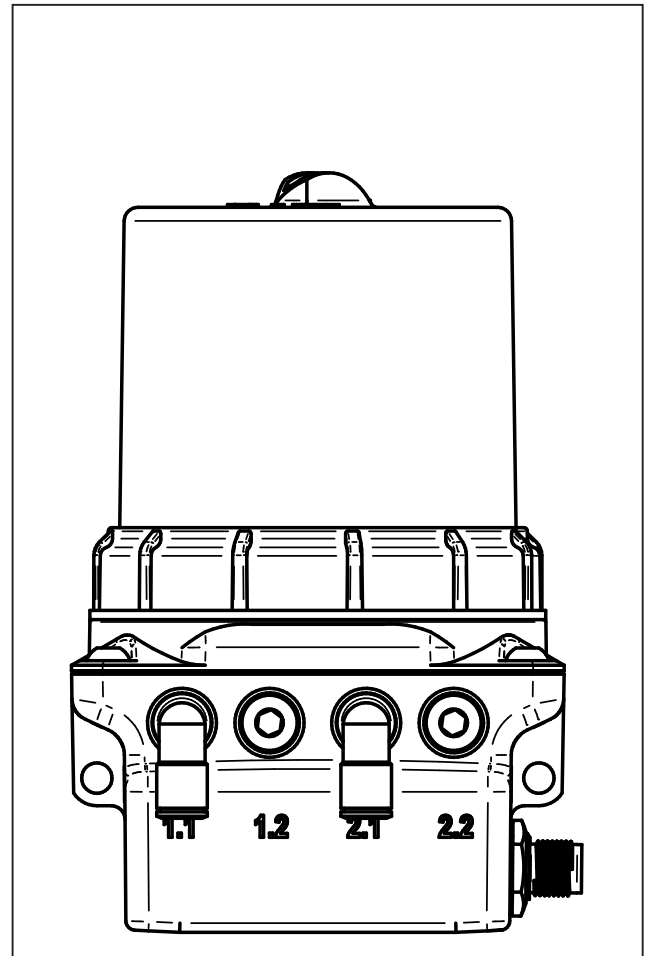
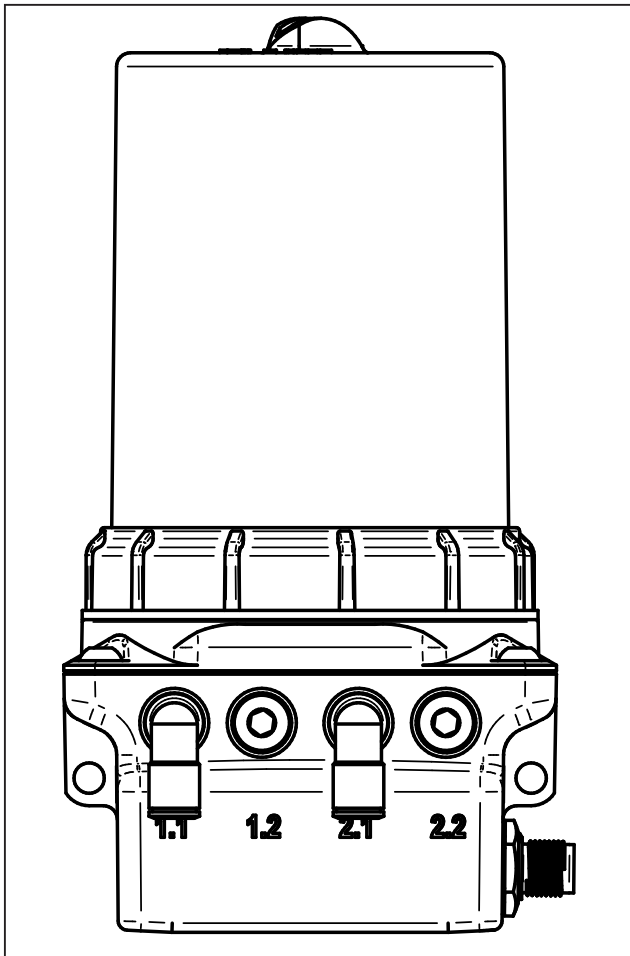


|   |     |
|---|-----|
| Number of pump units                                | 2   |
| Number of outlets                                   | 2   |
| Differences in dosing volume per pump unit possible | yes |

With the FlexxPump 422 DLS or FlexxPump 222 DLS, the theoretical two outlets per installed pump unit are combined internally. One outlet is supplied with  $0.15\text{cm}^3$  lubricant per stroke. The outlets are supplied with lubricant one after the other. The FlexxPump 422 DLS or FlexxPump 222 DLS allows to set dosing volume differences from outlet 1.1 to outlet 2.1 by individual control of the two pump bodies. An explanation of the different control signals can be found in chapter 8.2.



## 5.4 FlexxPump 423 DLS/ FlexxPump 223 DLS

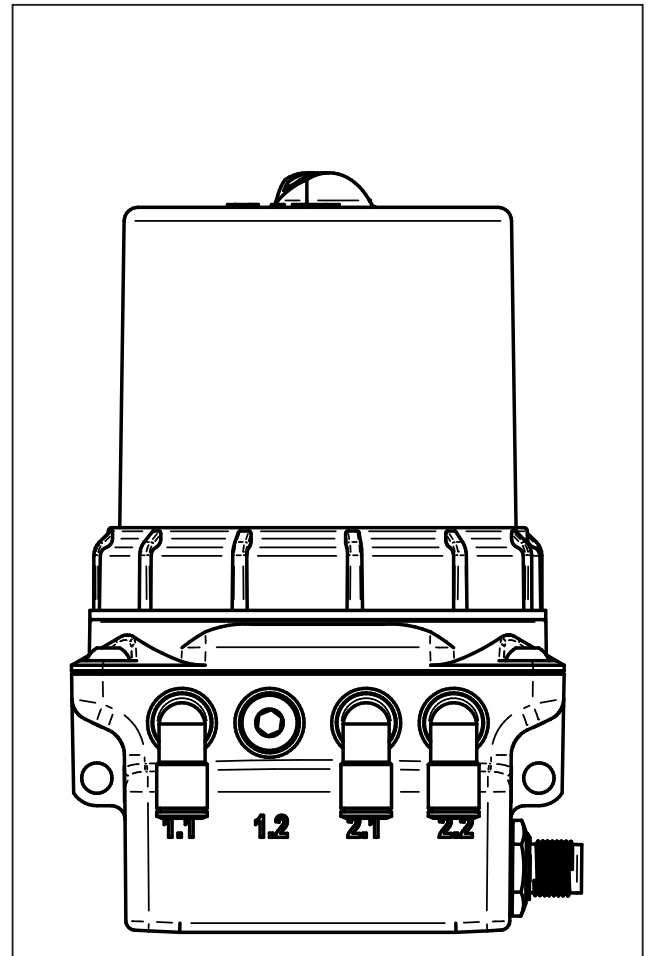
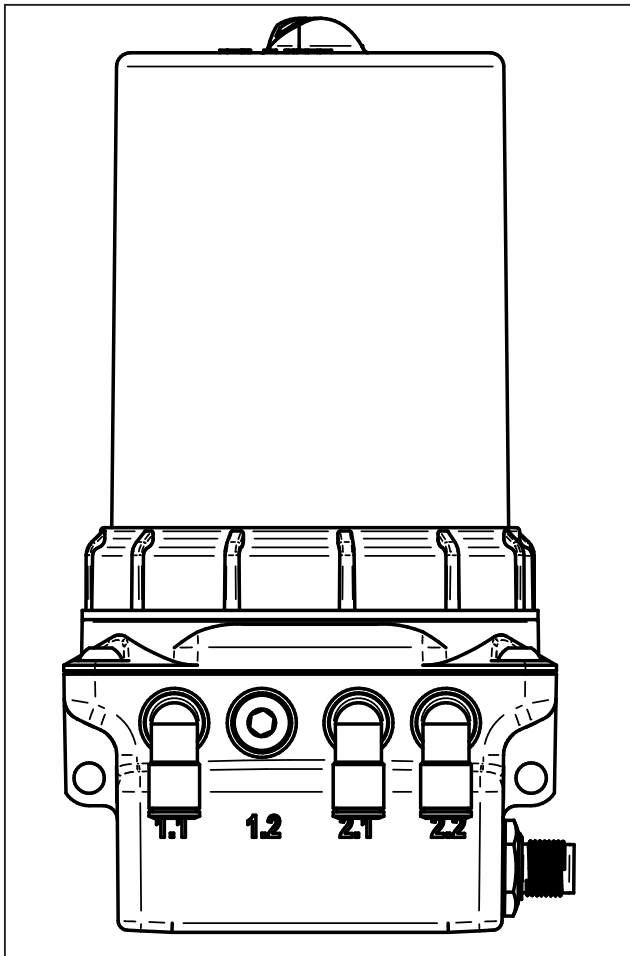


|   |     |
|---|-----|
| Number of pump units                                | 2   |
| Number of outlets                                   | 3   |
| Differences in dosing volume per pump unit possible | yes |

In the FlexxPump 423 DLS or FlexxPump 223 DLS, the theoretical two outlets of the first pump body are internally combined into one outlet 1.1. One outlet is supplied with 0.15 cm<sup>3</sup> lubricant per stroke. The outlets are supplied with lubricant one after the other. The FlexxPump 423 DLS or FlexxPump 223 DLS allows you to set dosing volume differences from outlet 1.1 to outlets 2.1 and 2.2 by controlling the two pump bodies individually. An explanation of the different control signals can be found in chapter 8.2.

① If the two pump units are controlled equally, outlet 1.1 is supplied with twice the amount of lubricant of outlets 2.1 or 2.2, due to the internal combination of the outlets of the first pump unit.

## 5.5 FlexxPump 424 DLS / FlexxPump 224 DLS

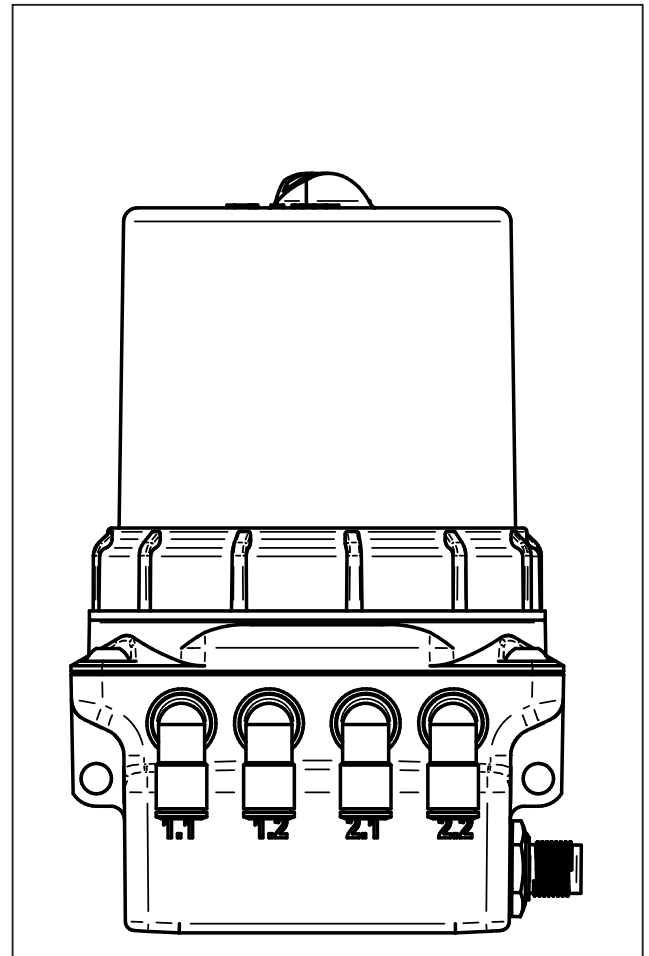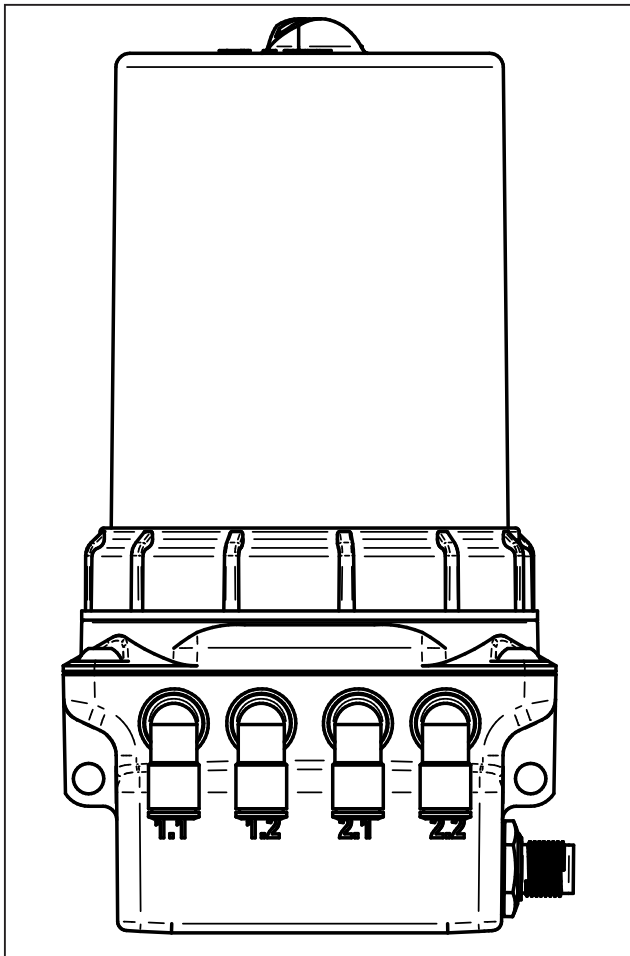

|   |     |
|---|-----|
| Number of pump units                                | 2   |
| Number of outlets                                   | 4   |
| Differences in dosing volume per pump unit possible | yes |

With the FlexxPump 424 DLS or FlexxPump 224 DLS, each possible outlet is operated individually. One outlet is supplied with 0.15 cm<sup>3</sup> lubricant per stroke. The outlets are supplied with lubricant one after the other.

The FlexxPump 424 DLS or FlexxPump 224 DLS allows you to set dosing volume differences from outlets 1.1 and 1.2 to outlets 2.1 and 2.2 by individually controlling the two pump bodies. An explanation of the different control signals can be found in chapter 8.2.

## 6. Mounting

### 6.1 Preparations

Before starting to work, inform yourself in detail about the FlexxPump 250/400 DLS using this user manual; in particular about the general safety instructions (section 2.7). Prepare the installation site carefully.



#### NOTICE


**Pressurised air can damage the seals of the Flexx-Pump 250/400 DLS and can transport dirt and foreign matter into the FlexxPump 250/400 DLS or the lubricant.**

- Do not use pressurised air.
- Make sure that there is no coarse dirt in the mounting area.

### 6.2 Assembly

#### 1. Condition as delivered


The FlexxPump 250/400 DLS is delivered in a cardboard box. Depending on the version ordered, further accessories such as a lubricant cartridge or additional tube connection parts are included.

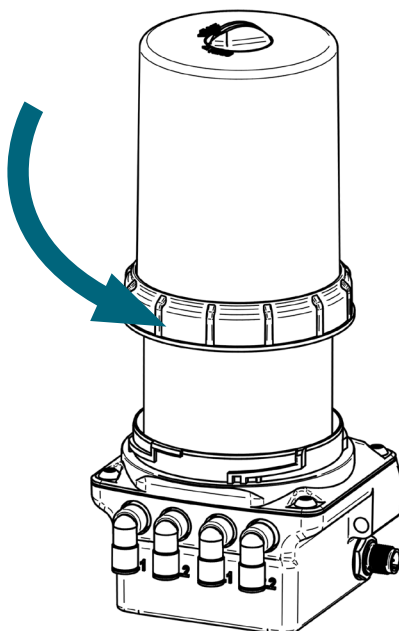

#### 2. Remove the housing from the power unit of the FlexxPump 250/400 DLS.

- Separate the housing from the power unit by turning the retaining ring counterclockwise.


ⓘ Make sure that no dirt, water or foreign bodies enters the lubricant inlet.

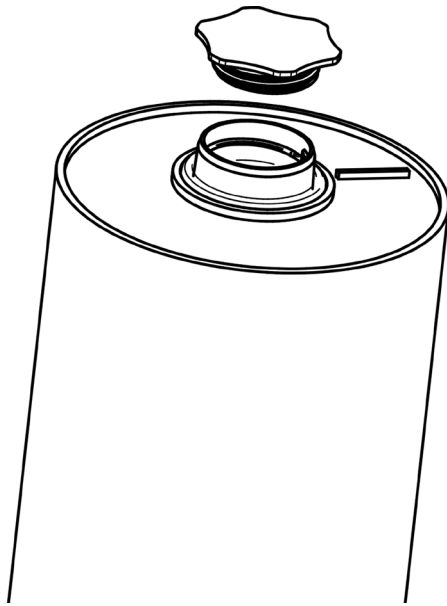

### 3. Unscrewing the cartridge cap.

- Turn the cap on the lubricant cartridge counterclockwise and pull it off.


ⓘ Pay attention to cleanliness when carrying out the work. It is imperative that dirt and foreign bodies do not enter the cartridge.

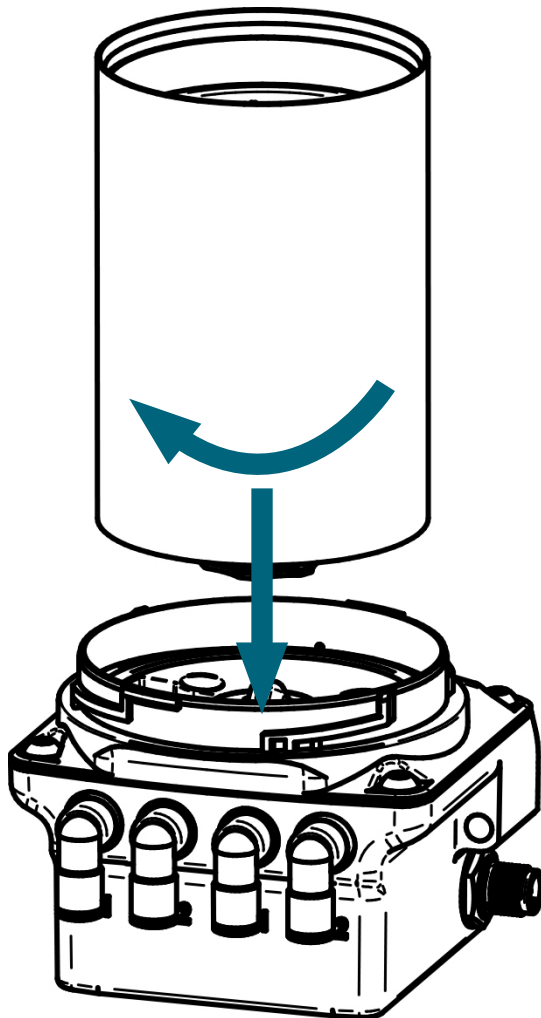

### 3. Mounting the lubricant cartridge

- Place the full lubricant cartridge on the FlexxPump 250/400 DLS.
- Turn the lubricant cartridge clockwise onto the FlexxPump 250/400 DLS.


ⓘ The end position is reached after two full rotations when the label of the lubricant cartridge is aligned with the front label of the FlexxPump 250/400 DLS.

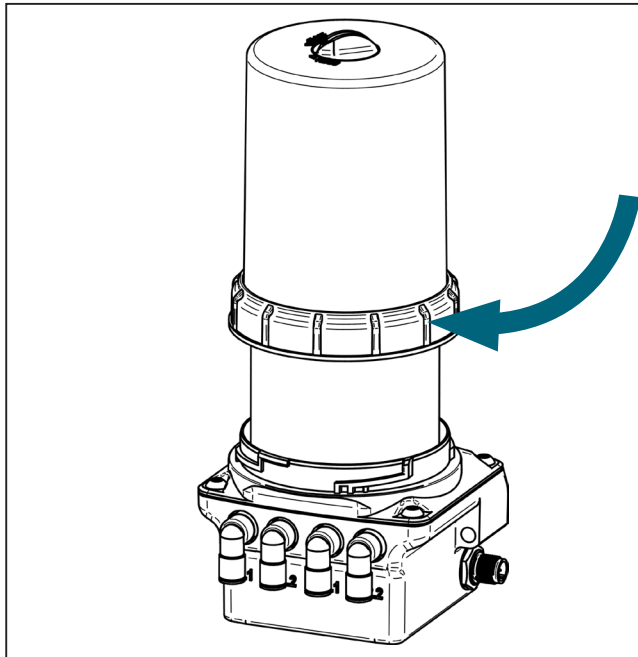

4. Assembling the housing on the power unit of the FlexxPump 250/400 DLS.

- Place the dismantled housing on the FlexxPump 250/400 DLS and press it onto the power unit.
- Fasten the housing to the power unit by turning the retaining ring clockwise.

① The retaining ring must snap into place when turning and be completely tightened.

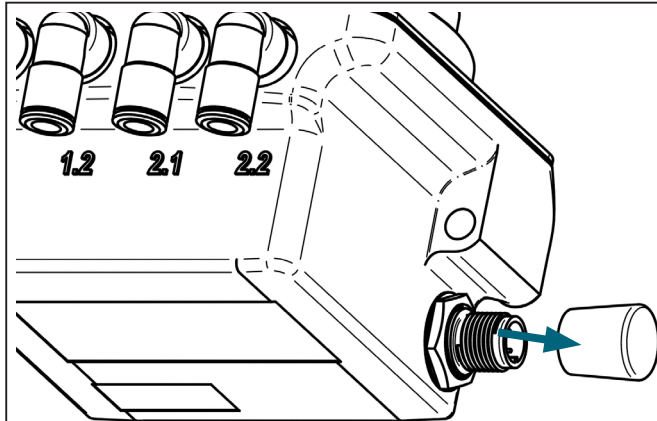

5. Remove the protective cap on the side of the FlexxPump 250/400 DLS.

- Remove the black protective cap from the side of the electrical M12x1 interface.

6. Connect the electrical interface

- Connect the FlexxPump 250/400 DLS to the external power supply or controller via the M12x1 interface on the side of the FlexxPump 250/400 DLS using a suitable connecting cable.

① Depending on the application, both connection cables with straight or angled sockets can be used.

① Please refer to chapter 8.1 for the condition of the connection cable.



## **DANGER**

**Defective or faulty electrical connections or unauthorized live components can lead to serious injuries or even death.**

- Have all electrical connection work carried out by qualified personnel only.
- Replace damaged cables or plugs immediately.
- Before carrying out any electrical installation work, observe the five safety rules of electrical engineering:
  - Unlocking
  - Secure against unintentional restarting.
  - Check that there is no voltage.
  - Ground and short-circuit.
  - Cover adjacent live parts.

## 6.3 Commissioning

Mount the FlexxPump 250/400 DLS carefully according to the steps described in chapter 6.2.

Depending on the scope of delivery, you must also carry out the following additional measures for the first-time commissioning:

### 1. Mechanical fastening

Fix the FlexxPump 250/400 DLS mechanically. Pay particular attention to the maximum tightening torques permissible for the M5 female threads!

### 2. Electrical connection

Connect the FlexxPump 250/400 DLS to the external controller (PLC) via the M12x1 interface using a suitable cable.

### 3. Check the assembly

Make sure that the FlexxPump 250/400 DLS is properly and completely assembled. In particular, the battery must be inserted and a lubricant cartridge must be fitted.

### 4. Execute 12 seconds control signal

Execute the 12 seconds control signal. The detailed description can be found in chapter 8.2.4. FlexxPump 250/400 DLS performs a certain number of strokes and transports the lubricant from the cartridge to the outlet.

### 5. Hydraulic connection

Connect the consumer hydraulically to the FlexxPump 250/400 DLS. If you connect tubes to the FlexxPump 250/400 DLS, make sure that the tubes and connectors are installed tightly, cleanly and correctly.

① Ideally, use tubes prefilled with the appropriate lubricant!

### 6. Check the settings on FlexxPump 250/400 DLS

Check the basic settings of the FlexxPump 250/400 DLS with the required values required for the lubrication point and adjust them if necessary. Changes must be made in the PLC program.

## 7. Operation and settings

### 7.1 General information

What you should know about operating and setting the FlexxPump 250/400 DLS:

- ✓ For operation, the FlexxPump 250/400 DLS must be integrated into a control system (PLC) and must be commanded and controlled via the PLC. The FlexxPump 250/400 DLS delivers one or more strokes (one stroke = 0.15 cm<sup>3</sup>) depending on the signals of the external control (PLC). Depending on the internal status of the FlexxPump 250/400 DLS (e.g. cartridge empty), different output signals are issued by the FlexxPump 250/400 DLS.
- ✓ The disposable interchangeable cartridge with 250ml or 400ml lubricant guarantees a controlled and constant quality of the lubricant and is filled without air bubble inclusions. The FlexxPump 250/400 DLS allows a high supply security of the lubrication point and prevents failures. The FlexxPump 250/400 DLS in its present version is designed exclusively for the lubricant grease.
- ✓ The FlexxPump 250/400 DLS cannot be used in the present version without a lubricant cartridge. Depending on the version ordered the cartridge can already be included in the scope of delivery and may already be connected and installed in the FlexxPump 250/400 DLS.
- ✓ If you have any questions about your application and the correct settings for FlexxPump 250/400 DLS, please contact the manufacturer (chapter I.II).

● Make sure that your PLC program is correct for your application and that the lubrication point is supplied with the correct amount of lubricant per time unit. If this is the case, you can operate the FlexxPump 250/400 DLS. If this is not the case, change your PLC program accordingly.

① To use the FlexxPump 250/400 DLS, it first has to be properly mounted and installed. The installation is very simple and described in detail in chapter 6.2.

① If you order a special version of the FlexxPump 250/400 DLS from the factory, the information on the supplement sheet is decisive for you!




## 8. Input and output signals - External control (PLC)

The FlexxPump 250/400 DLS operates as a pulse-controlled lubrication system only if unalterable input signals (high level) are transmitted from the PLC to the Flexx-Pump 250/400 DLS via PIN 2 in a defined sequence. The FlexxPump 250/400 DLS signals the respective status to the PLC via high/low levels, which can be tapped off at PIN 4, and thus enables comprehensive control or, by suitable programming of the PLC, differentiated evaluation of the different statuses. For the integration of the Flexx-Pump 250/400 DLS into an external control, one input and one output must be provided on the control side.

### 8.1 Pin assignment - External control (PLC)

| PIN-Assignment (PLC)                         |  |        |
|--|--|--------|
| PIN  | Assignment                                 | Colour |
| 1  | +24 V DC                                   | brown  |
| 2  | Input Signal PLC→<br>FlexxPump 400/200 DLS | white  |
| 3  | Ground                                     | blue   |
| 4  | Output Signal FlexxPump<br>400/200 DLS→PLC | black  |
| Type: M12x1 female connector; 4-pin, A-coded |  |        |

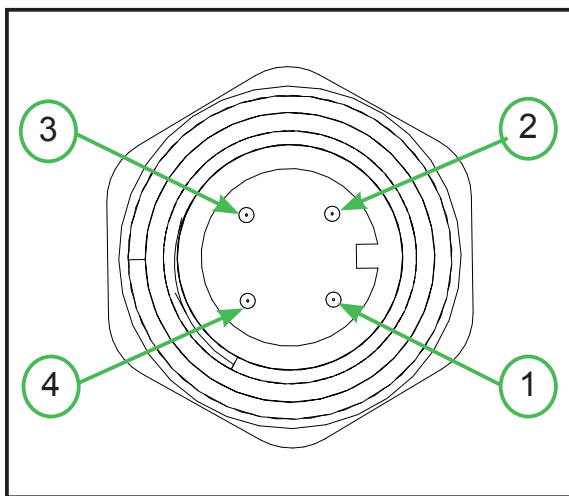

For the electrical connection to an external control (PLC) of a system, the FlexxPump 250/400 DLS has a 4-pin interface, which is designed as a plug connection with the standard industrial M12x1 connection.

① The FlexxPump 250/400 DLS can be switched off completely by switching off the supply voltage. After reapplying the supply voltage, the FlexxPump 250/400 DLS checks itself automatically but only operates after receiving an input signal from the PLC.

① To operate the FlexxPump 250/400 DLS via an external controller (PLC), a program corresponding to the communication protocol must be created in the PLC. A basic flowchart for the command of the FlexxPump 250/400 DLS can be found in the appendix (chapter 11.4).

① The output signal at PIN 4 can be tapped for further processing (e.g. indicator light or external control). The maximum permissible output current must not exceed  $I_{\max} < 20\text{mA}$ . No inductive load (e.g. relay) may be connected!

① After a longer standstill of the FlexxPump 250/400 DLS the manual execution of the "Quick-Check" is recommended. You can use for example the 12 seconds control signal to trigger a certain number of donations via the PLC (chapter 8.2).

## 8.2 Input signals - External control (PLC)

The FlexxPump 250/400 DLS provides the following unalterably defined control signals (input signals), which must be transmitted from the PLC to the FlexxPump 250/400 DLS via PIN 2 of the electrical M12x1 interface as high level (+24 V DC).

The control signals must be generated as high level (+24 V) by the external controller (PLC) over certain times with a tolerance of +/- 0.1 seconds.


| Signal length in seconds | Description       | Function              | Detail |
|--------------------------|-------------------|-----------------------|--------|
| 2 high                   | Signal 2 Seconds  | 1 Stroke PK1          | 8.2.1  |
| 5 high                   | Signal 5 Seconds  | 1 Stroke PK2          | 8.2.2  |
| 8 high                   | Signal 8 Seconds  | 1 Stroke PK1 and PK2  | 8.2.3  |
| 12 high                  | Signal 12 Seconds | FIL-Function          | 8.2.4  |
| 14 high                  | Signal 14 Seconds | Error acknowledgement | 8.2.5  |

① The input signals that your FlexxPump 250/400 DLS can process depend on the design of the FlexxPump 250/400 DLS. Compare your FlexxPump 250/400 DLS with the different designs described in chapter 5 to find out which signals are important for your FlexxPump 250/400 DLS and can be used for control. The designation of your FlexxPump 250/400 DLS can be found on the nameplate attached to the side of the FlexxPump 250/400 DLS, see chapter 3.1, fig. 1.

① The FlexxPump 250/400 DLS only processes the control signals listed in the table up to a maximum length of 14 seconds. If a high level (+24 V DC) is present outside the tolerances, the FlexxPump 250/400 DLS does not react. If a high level (+24 V DC) is applied to PIN 2 of the electrical interface for longer than 15 seconds, the LCD will display --- and the FlexxPump 250/400 DLS will not react.

### 8.2.1 Control signal 2 seconds

The control signal 2 seconds triggers a single dispensing process. After a specified pause time, this control signal can be repeated or another control signal can be sent. The FlexxPump 250/400 DLS reacts only in a certain operating state to control signals at PIN 2. The operating states are output by the FlexxPump 250/400 DLS via PIN 4 as a high/low level and must be tapped and processed accordingly in the PLC.

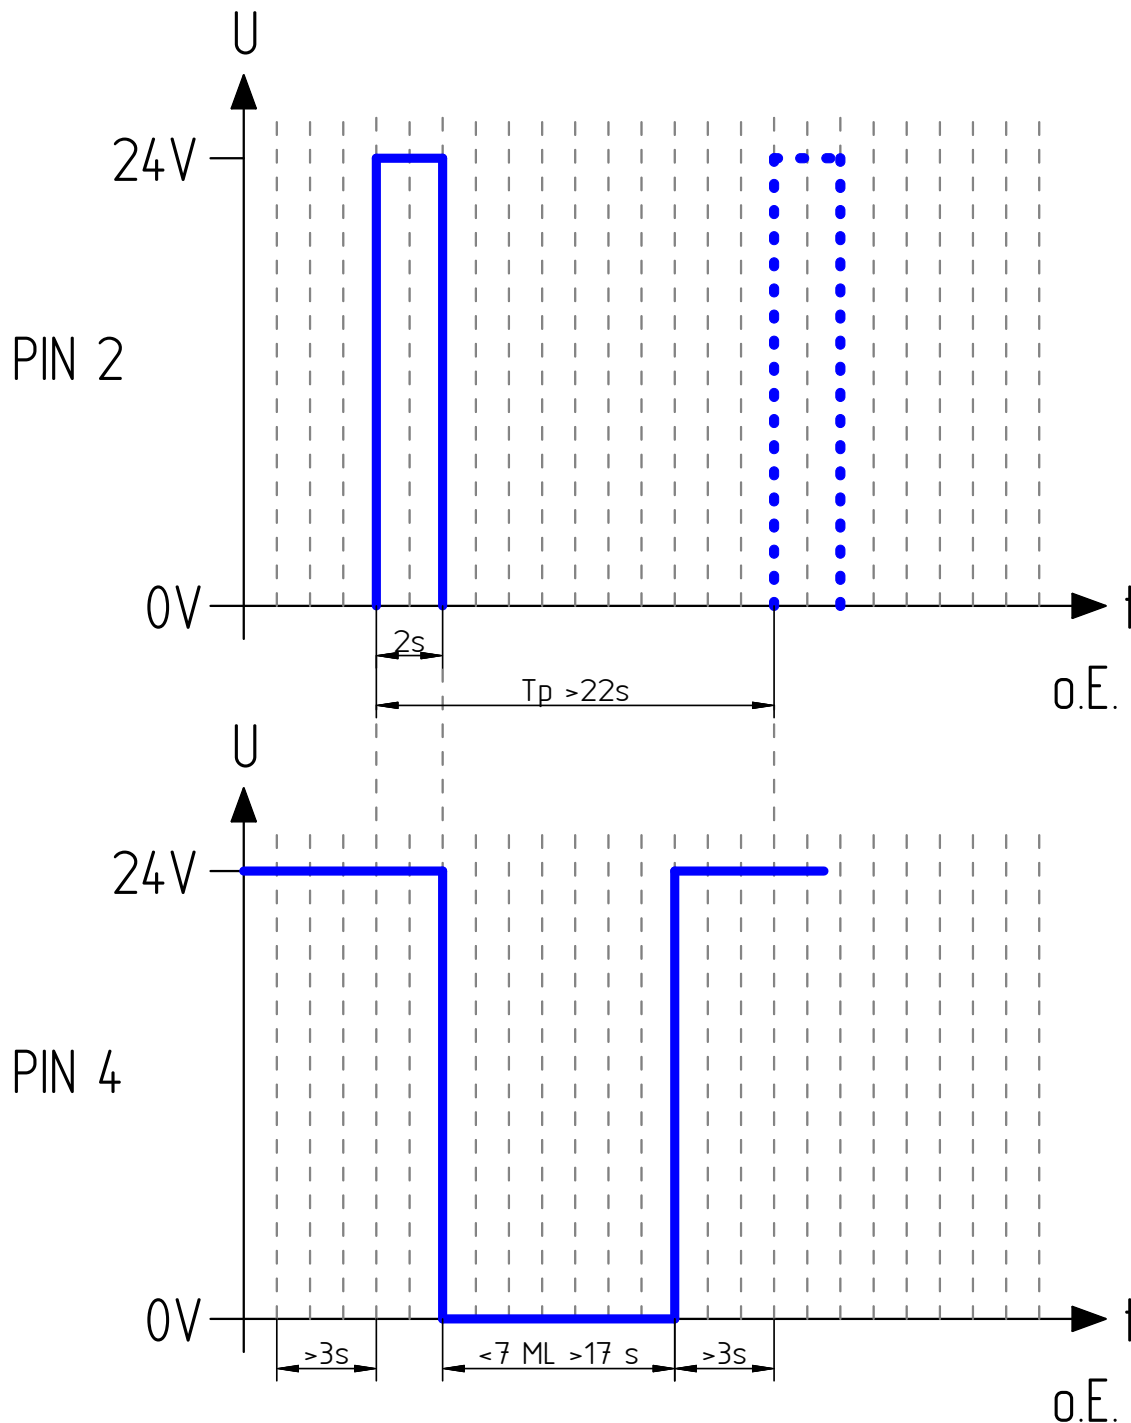

Tp: Pause time  
ML: Motor running time

## Description:

✓ The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

● The FlexxPump 250/400 DLS sends a permanent output signal (high level) to PIN 4, which indicates to the external control (PLC) that it is ready for operation. This output signal must be permanently and continuously present for >3 seconds. Control by the external controller is only possible if this condition is present.

● The control signal 2 seconds with a signal length of 2 (1.9 ... 2.1) seconds high level can be sent from the external control (PLC) to the FlexxPump 250/400 DLS.

● Immediately after the control signal drops, the motor run (ML) of the FlexxPump 250/400 DLS starts and 0.15 cm<sup>3</sup> lubricant is conveyed to the outlet. Simultaneously with the start of the motor run (ML), the FlexxPump 250/400 DLS sends a low level output signal to the external controller (PLC) as confirmation for the duration of the motor run (ML).

● The motor running time (ML) depends on various conditions, including the counterpressure present or built up in the hydraulic system and the temperature. With the FlexxPump 250/400 DLS, the motor running time (ML) is 7...17 seconds.

● At the end of an error-free and successful motor run (ML), the output signal at FlexxPump 250/400 DLS changes from a low level to a high level.

① A possible next control signal can be sent from the external controller (PLC) at the earliest >3 seconds after the end of the error-free and successful motor run. In the meantime, the FlexxPump 250/400 DLS does not process any control signals.


① In order to ensure a reliable and unambiguous recognition of the control signal, a pause must be observed. For the control signal 2 seconds, the FlexxPump 250/400 DLS requires a pause time (Tp) of at least 22 seconds between two identical or different control signals.

① If the integrated microelectronics of the FlexxPump 250/400 DLS has detected an error during or immediately after the end of the motor run (ML), this is transmitted to the external controller (PLC) by the corresponding output signal (section 8.3).

## 8.2.2 Control signal 5 seconds

The 5 second control signal triggers a single dispensing operation on pump unit 2 when a pump unit 2 is present. After a certain pause time, this control signal can be repeated or another control signal can be sent.

The FlexxPump 250/400 DLS reacts only in a certain operating state to control signals at PIN 2. The operating states are output by the FlexxPump 250/400 DLS via PIN 4 as a high/low level and must be tapped and processed accordingly in the PLC.

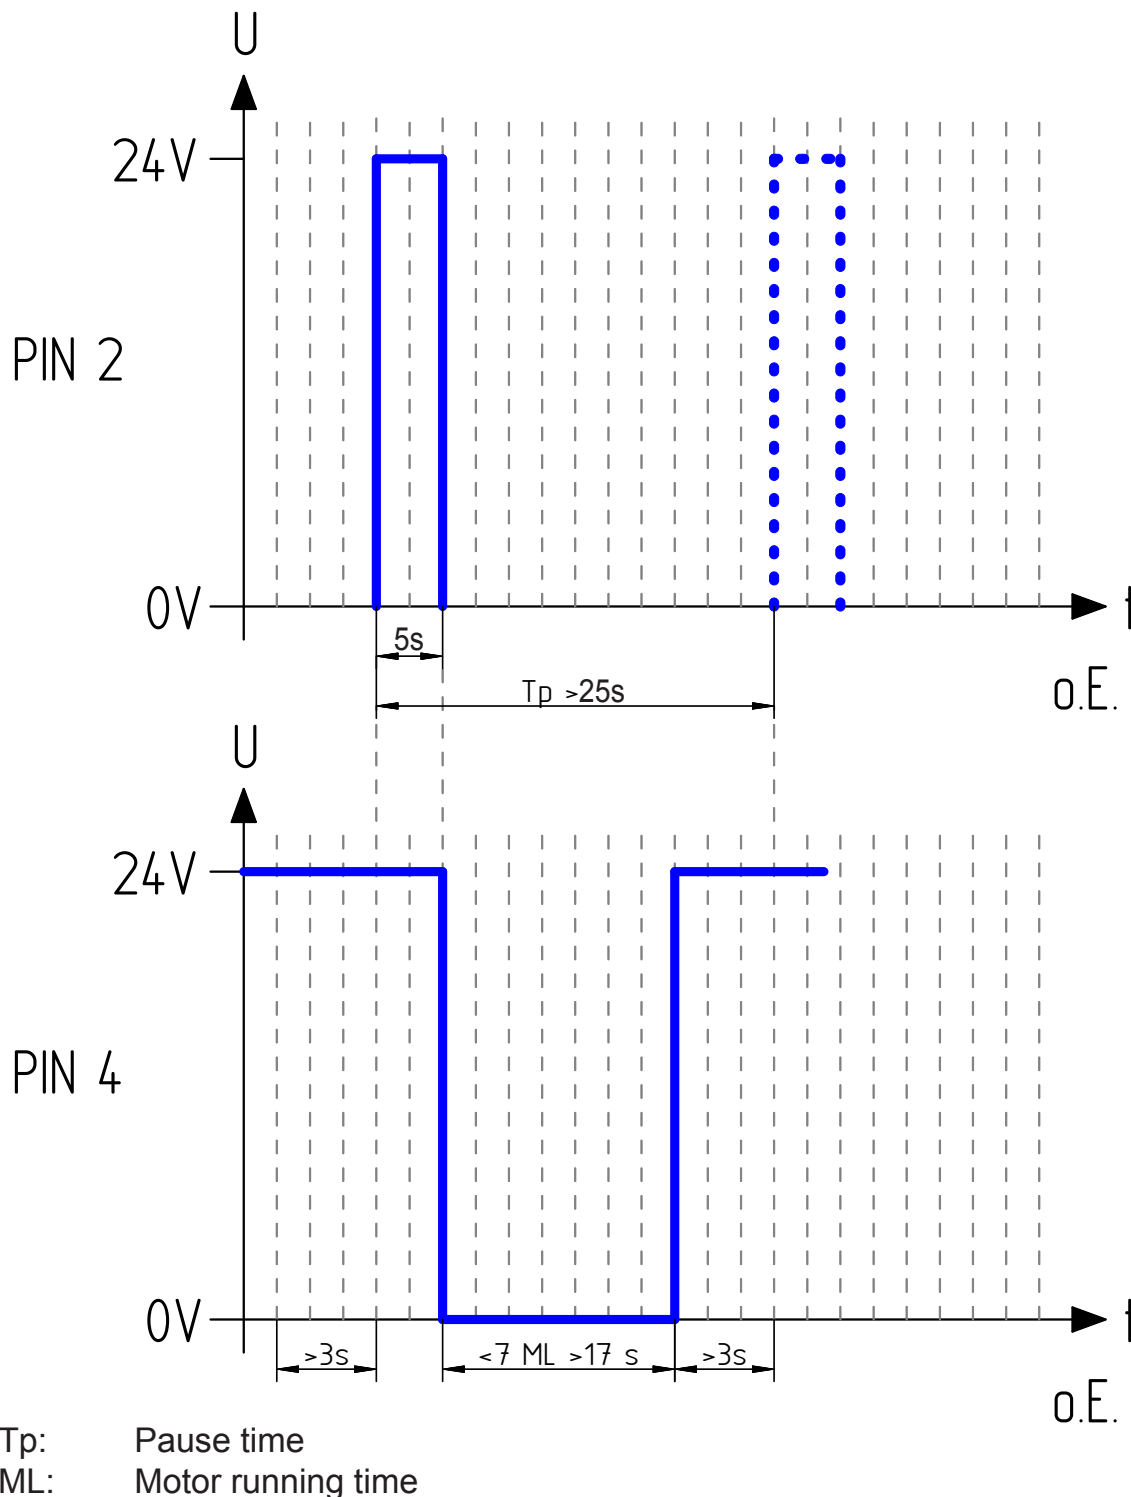

## Description:

✓The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

●The FlexxPump 250/400 DLS sends a permanent output signal (high level) to PIN 4, which indicates to the external control (PLC) that it is ready for operation. This output signal must be permanently and continuously present for >3 seconds. Control by the external controller is only possible if this condition is present.

●The control signal 2 seconds with a signal length of 5 (4.9 ... 5.1) seconds high level can be sent from the external control (PLC) to the FlexxPump 250/400 DLS.

●Immediately after the control signal drops, the motor run (ML) of the FlexxPump 250/400 DLS starts and 0.15 cm<sup>3</sup> lubricant is conveyed to the outlet. Simultaneously with the start of the motor run (ML), the FlexxPump 250/400 DLS sends a low level output signal to the external controller (PLC) as confirmation for the duration of the motor run (ML).

●The motor running time (ML) depends on various conditions, including the counterpressure present or built up in the hydraulic system and the temperature. With the FlexxPump 250/400 DLS, the motor running time (ML) is 7...17 seconds.

●At the end of an error-free and successful motor run (ML), the output signal at FlexxPump 250/400 DLS changes from a low level to a high level.

①A possible next control signal can be sent from the external controller (PLC) at the earliest >3 seconds after the end of the error-free and successful motor run. In the meantime, the FlexxPump 250/400 DLS does not process any control signals.

①In order to ensure a reliable and unambiguous recognition of the control signal, a pause must be observed. For the control signal 5 seconds, the FlexxPump 250/400 DLS requires a pause time (Tp) of at least 25 seconds between two identical or different control signals.

①If the integrated microelectronics of the FlexxPump 250/400 DLS has detected an error during or immediately after the end of the motor run (ML), this is transmitted to the external controller (PLC) by the corresponding output signal (section 8.3).

### **8.2.3 Control signal 8 seconds**

The 8 second control signal triggers a single dispensing operation at pump unit 1 and pump unit 2 when pump unit 2 is present. After a certain pause time, this control signal can be repeated or another control signal can be sent.

The FlexxPump 250/400 DLS reacts only in a certain operating state to control signals at PIN 2. The operating states are output by the FlexxPump 250/400 DLS via PIN 4 as a high/low level and must be tapped and processed accordingly in the PLC.

## Description:

✓The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

●The FlexxPump 250/400 DLS sends a permanent output signal (high level) to PIN 4, which indicates to the external control (PLC) that it is ready for operation. This output signal must be permanently and continuously present for >3 seconds. Control by the external controller is only possible if this condition is present.

●The control signal 2 seconds with a signal length of 8 (7.9 ... 8.1) seconds high level can be sent from the external control (PLC) to the FlexxPump 250/400 DLS.

●Immediately after the control signal drops, the motor run (ML) of the FlexxPump 250/400 DLS starts and 0.15 cm<sup>3</sup> lubricant is conveyed to the outlet. Simultaneously with the start of the motor run (ML), the FlexxPump 250/400 DLS sends a low level output signal to the external controller (PLC) as confirmation for the duration of the motor run (ML).

●The motor running time (ML) depends on various conditions, including the counterpressure present or built up in the hydraulic system and the temperature. With the FlexxPump 250/400 DLS, the motor running time (ML) is 7...17 seconds.

●At the end of an error-free and successful motor run (ML), the output signal at FlexxPump 250/400 DLS changes from a low level to a high level.

①A possible next control signal can be sent from the external controller (PLC) at the earliest >3 seconds after the end of the error-free and successful motor run. In the meantime, the FlexxPump 250/400 DLS does not process any control signals.


①In order to ensure a reliable and unambiguous recognition of the control signal, a pause must be observed. For the control signal 5 seconds, the FlexxPump 250/400 DLS requires a pause time (Tp) of at least 45 seconds between two identical or different control signals.

①If the integrated microelectronics of the FlexxPump 250/400 DLS has detected an error during or immediately after the end of the motor run (ML), this is transmitted to the external controller (PLC) by the corresponding output signal (section 8.3).



## 8.2.4 Control signal 12 seconds

The control signal for 12 seconds triggers the FIL function by the external control. A total of 40 dispensing operations per pump unit are carried out automatically one after the other. After a certain pause time, this control signal can be repeated or another control signal can be sent. The FlexxPump 250/400 DLS reacts only in a certain operating state to control signals at PIN 2. The operating states are output by the FlexxPump 250/400 DLS via PIN 4 as high/low levels and must be tapped and processed accordingly in the PLC.

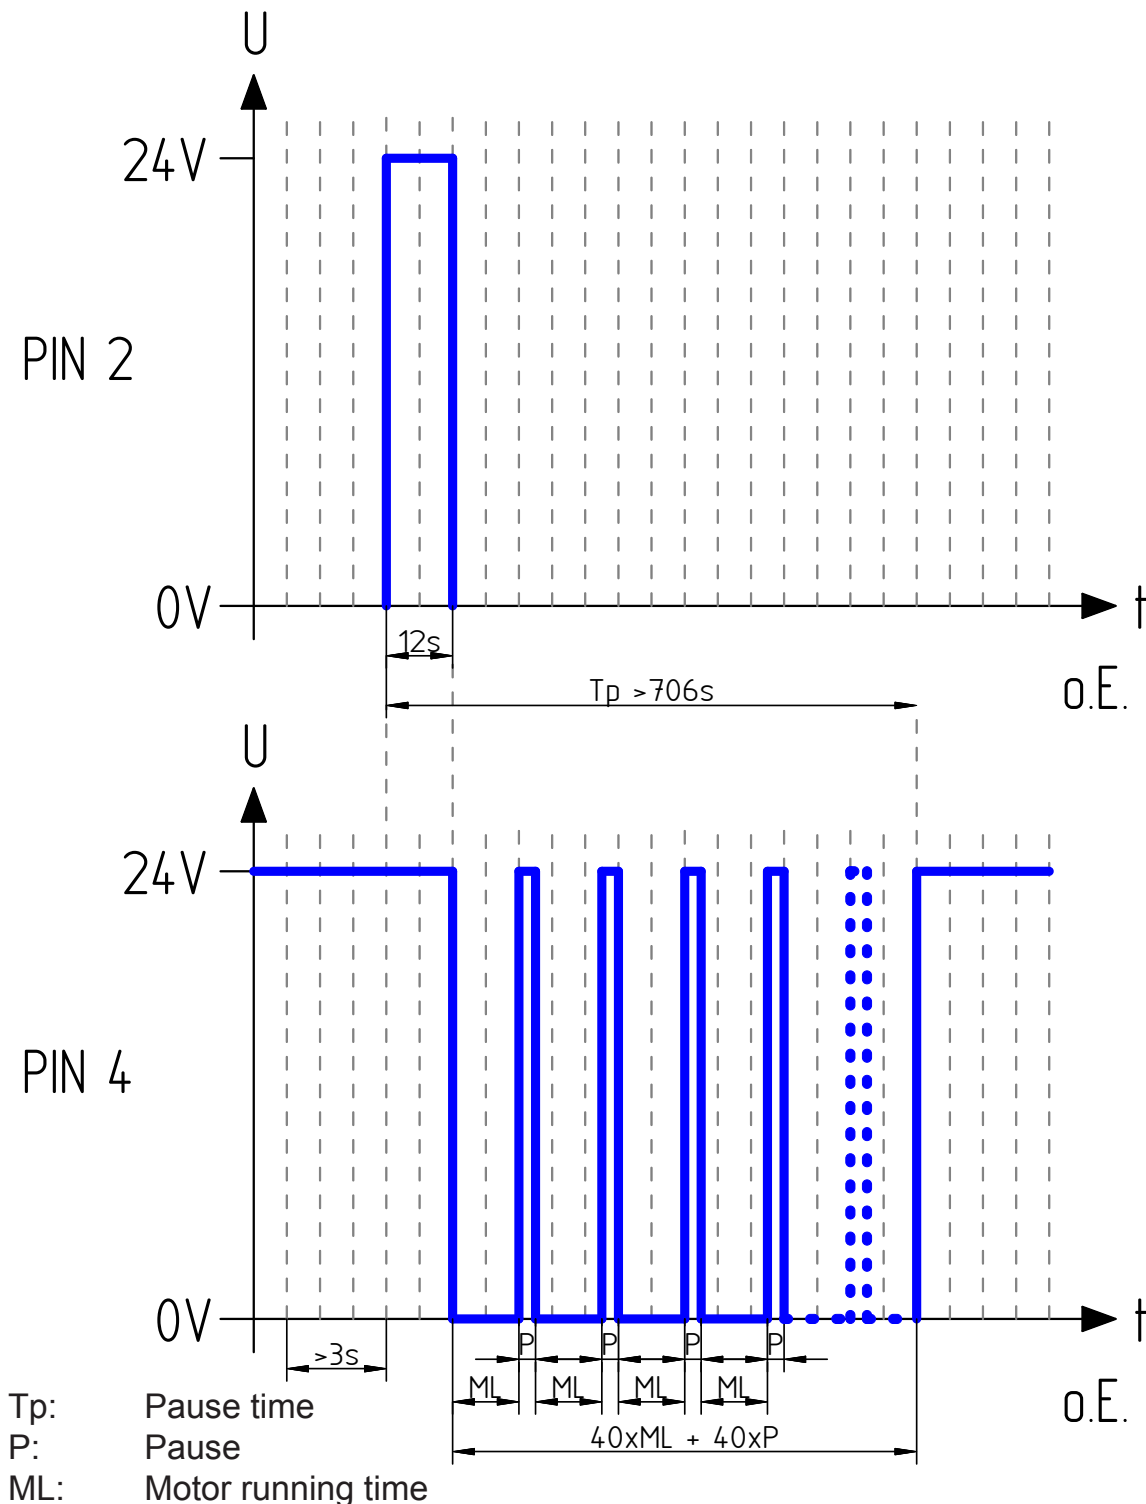

## Description:

✓ The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

● The FlexxPump 250/400 DLS sends a permanent output signal (high level) to PIN 4, which indicates to the external control (PLC) that it is ready for operation. This output signal must be permanently and continuously present for >3 seconds. Control by the external controller is only possible if this condition is present.

● The control signal 2 seconds with a signal length of 12 (11.9 ... 12.1) seconds high level can be sent from the external control (PLC) to the FlexxPump 250/400 DLS.

● Immediately after the control signal drops, the motor run (ML) of the FlexxPump 250/400 DLS starts and  $0.15 \text{ cm}^3$  lubricant is conveyed to the outlet. Simultaneously with the start of the motor run (ML), the FlexxPump 250/400 DLS sends a low level output signal to the external controller (PLC) as confirmation for the duration of the motor run (ML).

● The motor running time (ML) depends on various conditions, including the counterpressure present or built up in the hydraulic system and the temperature. With the FlexxPump 250/400 DLS, the motor running time (ML) is 7...17 seconds.

● At the end of each error-free and successful motor run (ML), the output signal at the FlexxPump 250/400 DLS changes from a low level to a high level for a short pause time  $P = 0.5$  seconds.

● A total of 40 engine runs and donations will take place immediately one after the other.  $40 \times 0.15 \text{ cm}^3 = 6.0 \text{ cm}^3$  lubricant is conveyed from the cartridge to the outlet.

① A possible next control signal can be sent from the external controller (PLC) at the earliest >3 seconds after the end of the error-free and successful motor run. In the meantime, the FlexxPump 250/400 DLS does not process any control signals.


① In order to ensure a reliable and unambiguous recognition of the control signal, a pause must be observed. For the control signal 12 seconds, the FlexxPump 250/400 DLS has a pause time ( $T_p$ ) between two identical or different control signals of at least 706 ( $T_p = ML_{\max} \times 40 \text{ strokes} + P \times 40 \text{ strokes} + \text{tolerance}$ ) seconds.

① For an FlexxPump 250/400 DLS with two pump units, 40 filling strokes **per pump unit** are triggered when the control signal is triggered for 12 seconds. The pause time ( $T_p$ ) is doubled.

① If the integrated microelectronics of the FlexxPump 250/400 DLS has detected an error during or immediately after the end of the motor run (ML), it is transmitted to the external controller (PLC) by the corresponding output signal (section 8.3).

### 8.2.5 Control signal 14 seconds

The control signal 14 seconds is used to acknowledge error messages of errors E2 and E3. It is the only control signal that the FlexxPump 250/400 DLS can process when a low level output signal is sent. Irrespective of the basic possibility of remote acknowledgement of an error, it is essential to identify and eliminate the cause when an error message is present.

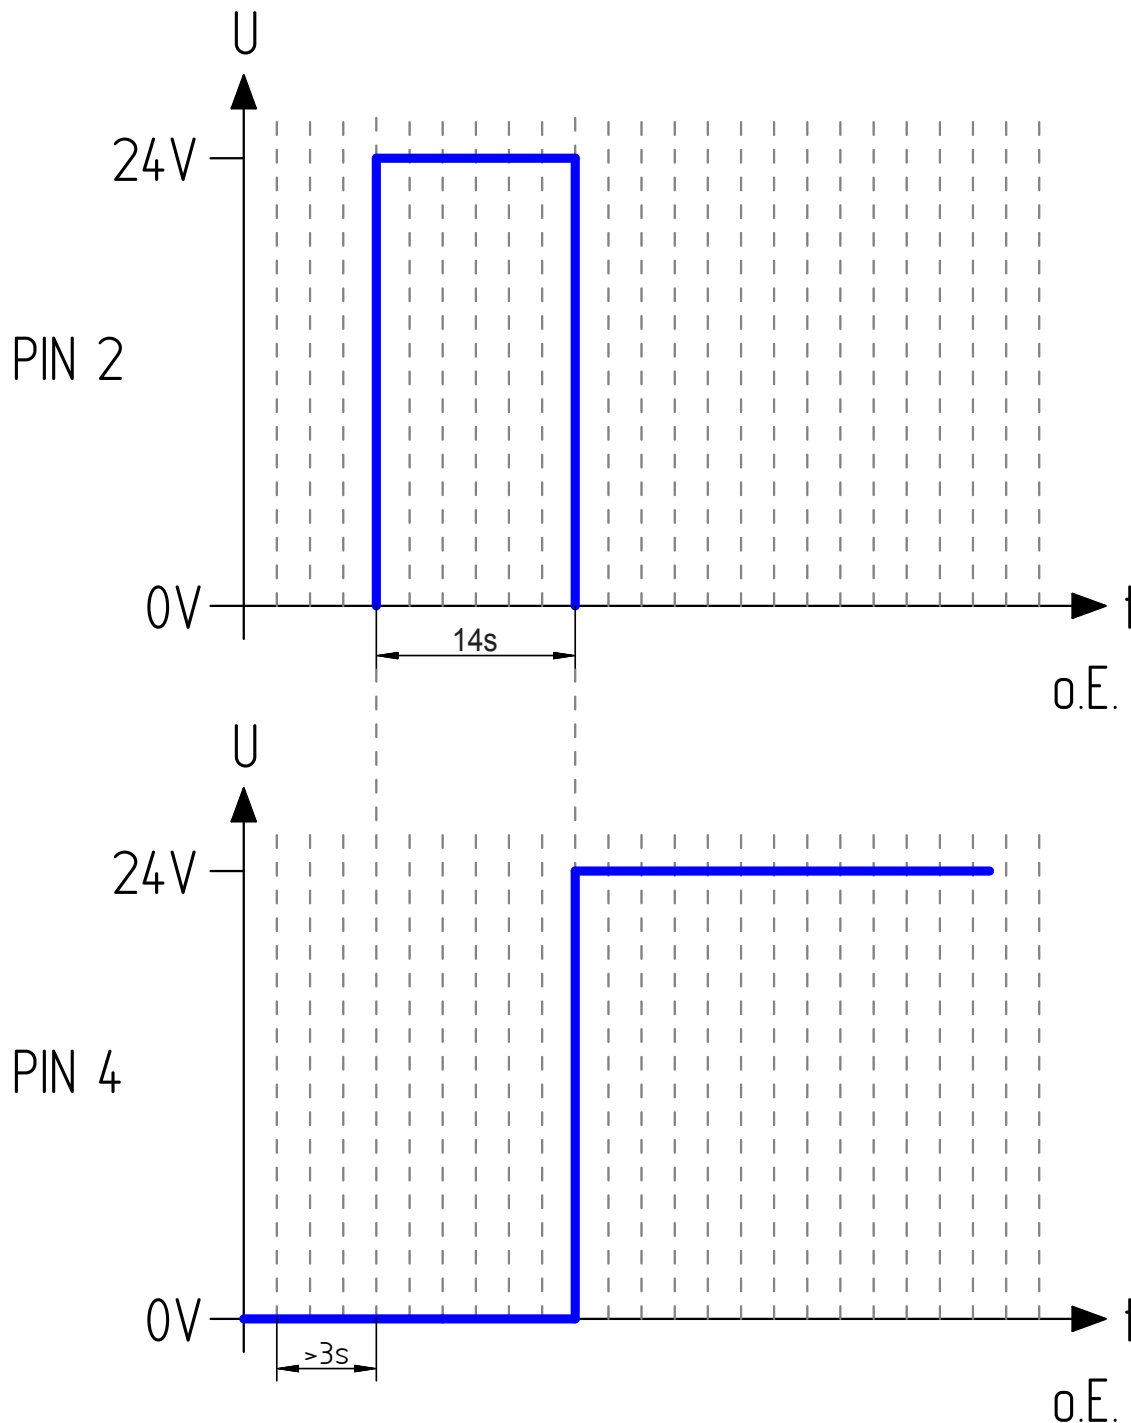

## Description:

✓The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

✓There is an error at the FlexxPump 250/400 DLS.

●The FlexxPump 250/400 DLS sends a permanent output signal (low level) to PIN 4, which indicates an error to the external controller (PLC). This output signal must be permanently and continuously present for >3 seconds.

●The control signal 14 seconds with a signal length of 14 (13.9 ... 14.1) seconds high level can be sent from the external control (PLC) to the FlexxPump 250/400 DLS. The control signal is sent to the FlexxPump 250/400 DLS by the external control (PLC).

●At the end of the control signal, the integrated microelectronics of the FlexxPump 250/400 DLS will automatically check itself:

- +If this internal check is successful, the output signal at the FlexxPump 250/400 DLS changes from a low level to a high level; the error is thus acknowledged and the FlexxPump 250/400 DLS is ready for operation again.
- If this internal check is not successful, the FlexxPump 250/400 DLS continues to send a low level output signal. The error is still present. For further measures in this case: Chap. 8.3.4.

①A possible next control signal can be sent from the external controller (PLC) at the earliest >3 seconds after the end of the error-free and successful motor run. In the meantime, the FlexxPump 250/400 DLS does not process any control signals.

① Regardless of the principle of remote acknowledgement of an error, it is essential to identify and eliminate the cause when an error message is present.


### 8.3 Output signals - External control (PLC)

| Description              | Output signal (PIN 4)                  | Detail      |
|--------------------------|--|-------------|
| Ready for operation      | high, permanent                        | Chap. 8     |
| Receiving control signal | high, permanent                        | Chap. 8     |
| Dispensing process       | low, 10...18 Seconds                   | Chap. 8     |
| Cartridge empty          | 0,5Hz-square wave signal,<br>permanent | Chap. 8.3.1 |
| Error                    | low, permanent                         |             |

If an output signal as low level (0V) is permanently present at PIN 4 for longer than 3s and no dispensing process is currently being performed by the FlexxPump 250/400 DLS, there is an error at the FlexxPump 250/400 DLS. The only thing that can be determined by the signalling is that there is an error at the FlexxPump 250/400 DLS. The cause must be determined and eliminated by the operator. Chapters 8.3.2, 8.3.3 and 8.3.4 provide a procedure and possible causes for the pump error message.

### 8.3.1 Empty level

The FlexxPump 250/400 DLS is equipped with a sensor which detects the empty level of the lubricant cartridge. After reaching the empty level, the FlexxPump 250/400 DLS no longer delivers lubricant. This ensures that no air enters the FlexxPump 250/400 DLS or the lubricant lines. The empty state message (error E1) is transmitted to the external control (PLC). For this purpose, a separate, unique output signal is provided, which can be easily and reliably detected by the external control (PLC).

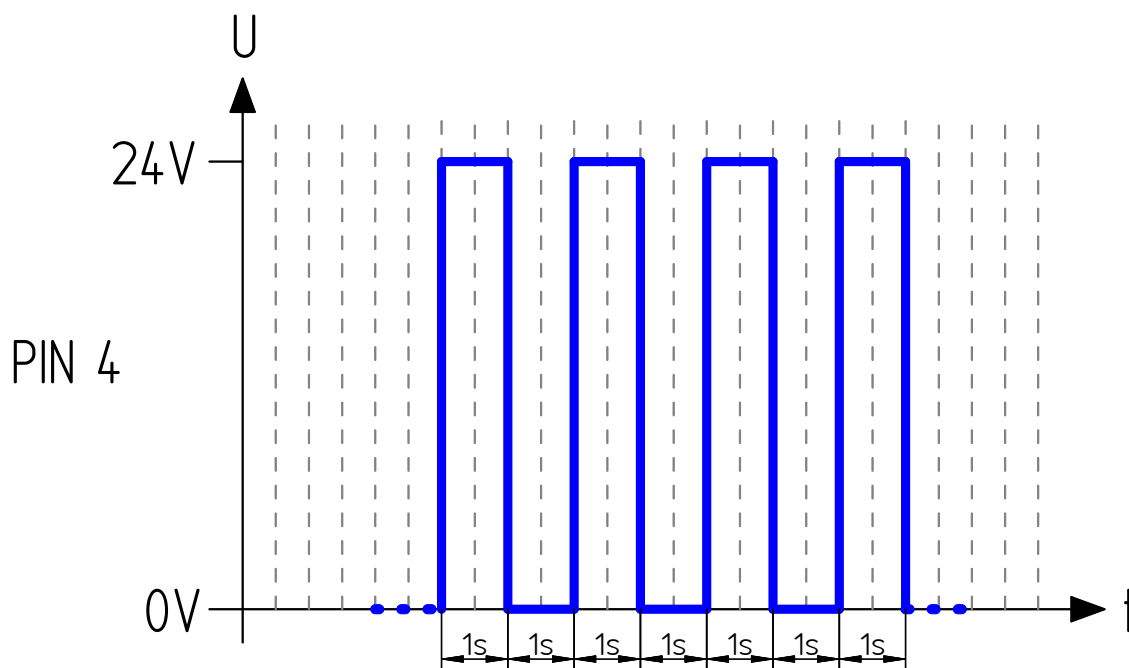

#### Description:


✓ The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

- The Empty state signal can only occur immediately after a donation.
- The Empty state signal must and cannot be acknowledged. Remedial action is described in chapter 9.2.

At the same time as removing the cartridge, the FlexxPump 250/400 DLS sends a permanent low level (0 V) as output signal to PIN 4.

① The FlexxPump 250/400 DLS does not process control signals until all errors have been eliminated.

The transition of the output signals when changing a cartridge on the Flexx-Pump 250/400 DLS is shown and described below:

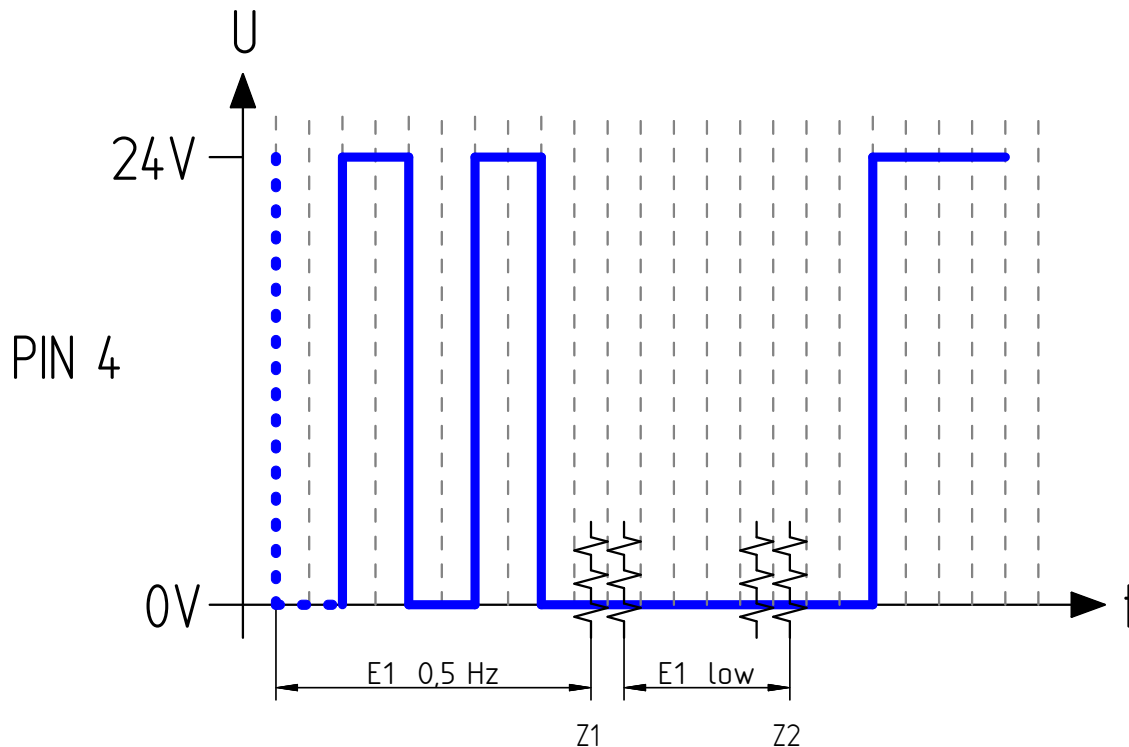

- Z1: Removing the empty cartridge  
Z2: Mounting the new cartridge

### Description:


✓The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

- The empty state of the cartridge occurred after a donation, the output signal of the FlexxPump 250/400 DLS is initially the 0.5Hz square wave signal (empty state signal) (0/+24 V).
- Z1 indicates the time of removal of the empty cartridge. The output signal of the FlexxPump 250/400 DLS now changes from a 0.5Hz square wave signal to a permanent low signal (0V).
- Z2 indicates the time for screwing on a new, full cartridge. The output signal of the FlexxPump 250/400 DLS now changes from a permanent low signal (0V) to a permanent high signal (+24V). In this way the FlexxPump 250/400 DLS signals to the external controller (PLC) that it is ready for operation again.
- If the empty state signal has occurred during the execution of the control signal 12 seconds, the outstanding strokes are continued after the new cartridge has been screwed on.

① The FlexxPump 250/400 DLS does not process control signals until all errors have been eliminated.

### 8.3.2 Error Overload

The Error Overload signals a hydraulic overload during a dispensing process, i.e. the maximum pressure is exceeded.

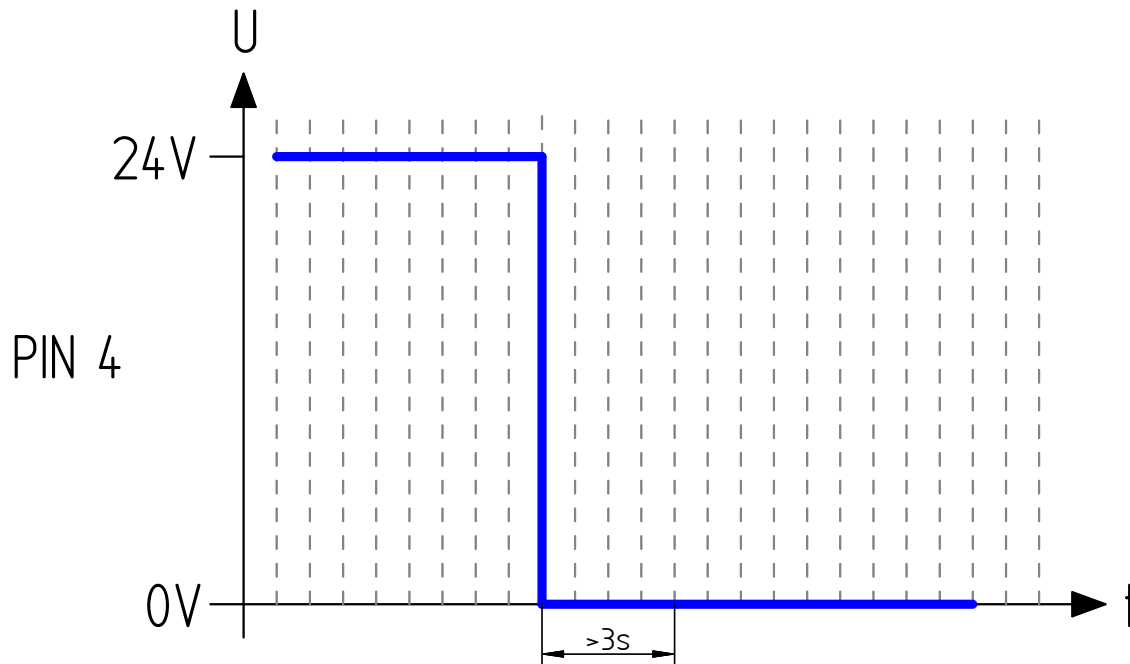

#### Description:

- ✓ The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.
- ✓ The FlexxPump 250/400 DLS has been successfully controlled by the external control (PLC) immediately before the occurrence of error E2 and has (attempted) to perform a dispensing operation.

● When the maximum permissible pressure is reached during or after a donation, the FlexxPump 250/400 DLS sends a permanent output signal as low level (0 V) to PIN 4 for external control (PLC).


● The error E2 (overload) must be acknowledged with the control signal 14 seconds (chapter 8.2.5) after elimination of the cause(s).

① The FlexxPump 250/400 DLS does not process control signals until all errors have been eliminated.



### 8.3.3 Error Under- or Overvoltage

Error Under- or Overvoltage indicates that the FlexxPump 250/400 DLS power supply is not within the specified parameters.

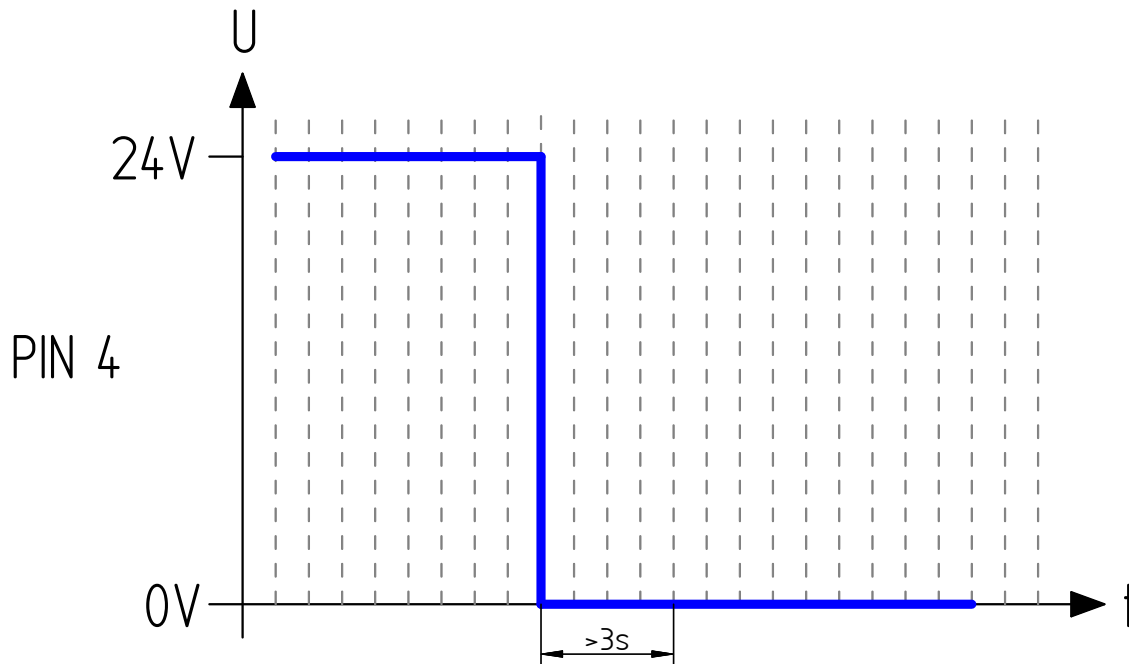

**Description:**


✓The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

- If the supply voltage is too low, the FlexxPump 250/400 DLS sends a permanent output signal as low level (0 V) to PIN 4 for external control (PLC).
- Check the supply voltage and compare it with the parameters given in the FlexxPump 250/400 DLS technical data.
- Error E3 (undervoltage) must be acknowledged with the control signal 14 seconds (chapter 8.2.5) after elimination of the cause(s).

ⓘ The FlexxPump 250/400 DLS does not process control signals until all errors have been eliminated.

### 8.3.4 Critical error

The Critical Error indicates that the integrated microelectronics has detected a critical error and that the FlexxPump 250/400 DLS is not operating within the valid parameters. The cause can be mechanical, electronic or any other influencing variable.

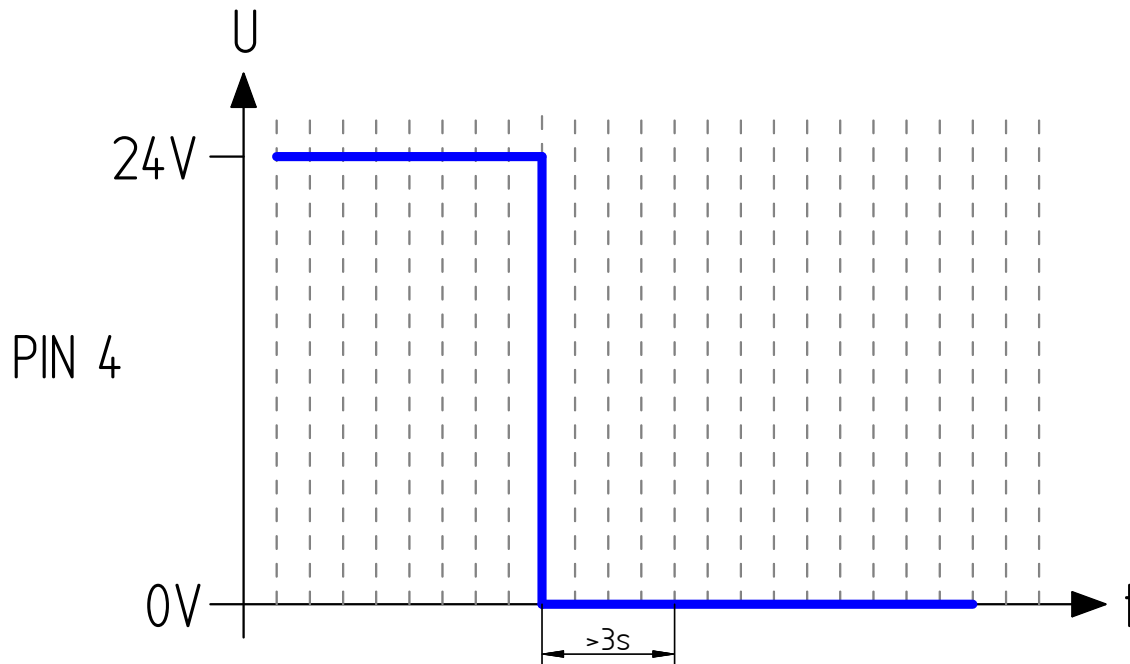

#### Description:

✓ The FlexxPump 250/400 DLS is properly connected to an external controller via the electrical interface and connected to the power supply.

- In an (internal) diagnosis, the critical (exception) error E4 has been detected.
- The error E4 can have different causes:
  1. The voltage is too high for a short time, 28 ... 30V, causing the motor to run too short.
  2. The connected supply voltage was too low, then the motor will run too long.

In these cases the error is eliminated by switching the FlexxPump off and on.  
Important! At least 60 seconds must pass between switching off and on!

If this does not correct the E4 error, dismantle the FlexxPump 125 and send it back to the manufacturer together with the lubricant cartridge and a description of the error. The address of the manufacturer is given in chapter I.II.

ⓘ Do not open the FlexxPump 250/400 DLS without authorization! Observe the relevant notes and regulations in these instructions for proper use (section 2.5) and warranty (section 2.6)!

## 9. Maintenance and disposal

- Before starting any maintenance work, inform yourself about the general safety instructions (see Chapter 2) and observe the relevant local and operational safety regulations.
- Do not deactivate any protective device without authorization!

### 9.1 Maintenance schedule

The following maintenance schedule must be observed for the Flexx-Pump 250/400 DLS:

| Maintenance      | Commisioning | After 500 hours or after 3 months | Every year | If required |
|------------------|--------------|-----------------------------------|------------|-------------|
| Cleaning         | x            | x                                 | x          | x*          |
| Visual check     | x            | x                                 | x          | x*          |
| Cartridge change | x**          |                                   | x***       | x*          |

\* Depending on operating conditions and lubricant consumption

\*\* Depending on delivery status (ordered version)

\*\*\* Recommendation after 2 years at the latest

#### 9.1.1 Visual check

- Check the entire lubrication system (FlexxPump 250/400 DLS and any connected accessories including tubes and distributors) for external damage (e.g. loose or loose-ned tubes) by a thorough and conscientious visual inspection.
- Check the condition of the lubrication point for correct supply of lubricant.
- Replace damaged or defective parts immediately to ensure permanent lubrication.
- Check the filling level of the cartridge on the FlexxPump 250/400 DLS.
- Check possible error messages on the FlexxPump 250/400 DLS and remedy the causes accordingly.

### 9.1.2 Cleaning

- Clean the FlexxPump 250/400 DLS from dirt using suitable cleaning agents (e.g. absorbent towels, cloths).



#### NOTICE





**Compressed air can damage the seals of the Flexx-Pump 250/400 DLS as well as transport dirt and foreign bodies into the FlexxPump 250/400 DLS or the lubricant.**

- Do not use compressed air to clean the Flexx-Pump 250/400 DLS.


### 9.1.3 Recommissioning after maintenance

- Reinstall all safety devices and make sure that no tools remain in the danger area.
- Check that the FlexxPump 250/400 DLS is turned on.
- Carry out a "Quick Check" (test run) using the control signal 2 seconds (chapter 8.2.1).

## 9.2 Cartridge change

|   |  |
|---|--|
|    | <div>NOTICE</div> <p>A used lubricant cartridge must not be replaced on the Flexx-Pump 250/400 DLS, as the integrated stroke counter of the FlexxPump 250/400 DLS is automatically reset by the cartridge sensor after a cartridge has been removed.</p> <ul style="list-style-type: none"><li>■ Only use full lubricant cartridges.</li></ul> |
|    | <div>NOTICE</div> <p>Only use original lubricant cartridges with lubricant approved by the manufacturer.</p> <ul style="list-style-type: none"><li>■ Observe the maximum shelf life of lubricant filled in cartridges.</li></ul>   |
|   | <div>NOTICE</div> <p>It is not possible to refill empty or opened lubricant cartridges.</p>  |
|  | <div>NOTICE</div> <p>Make sure you use the same lubricant in the new cartridge that is already in use.</p> <ul style="list-style-type: none"><li>■ Compare the data on the lubricant cartridge.</li></ul>  |


The cartridge only needs to be changed if it is empty or the service life of the lubricant has been exceeded. The cartridge can be changed during normal operation of the FlexxPump 250/400 DLS.

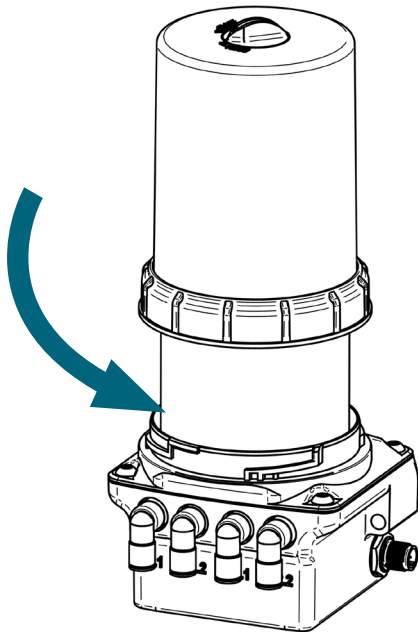

1. Remove the housing from the power unit of the FlexxPump 250/400 DLS.

- Separate the housing from the power unit by turning the retaining ring counterclockwise.


① Make sure that no dirt, water or foreign bodies enters the lubricant inlet.

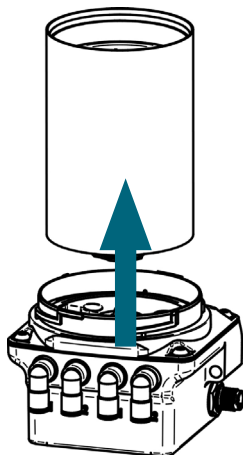

2. Remove the empty cartridge.

- Turn the empty cartridge counterclockwise and pull it off.

① Pay attention to cleanliness when carrying out the work. Be sure to prevent dirt, liquids and foreign bodies from entering the grease inlet.

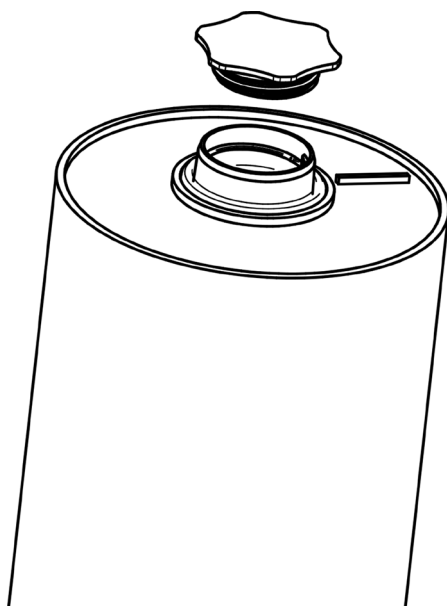


3. Remove the cartridge cap from the new cartridge.

- Turn the cap of the lubricant cartridge counterclockwise and pull it off.

① Pay attention to cleanliness when carrying out the work. Be sure to prevent dirt, liquids and foreign bodies from entering the cartridge.


#### 4. Mounting the new lubricant cartridge

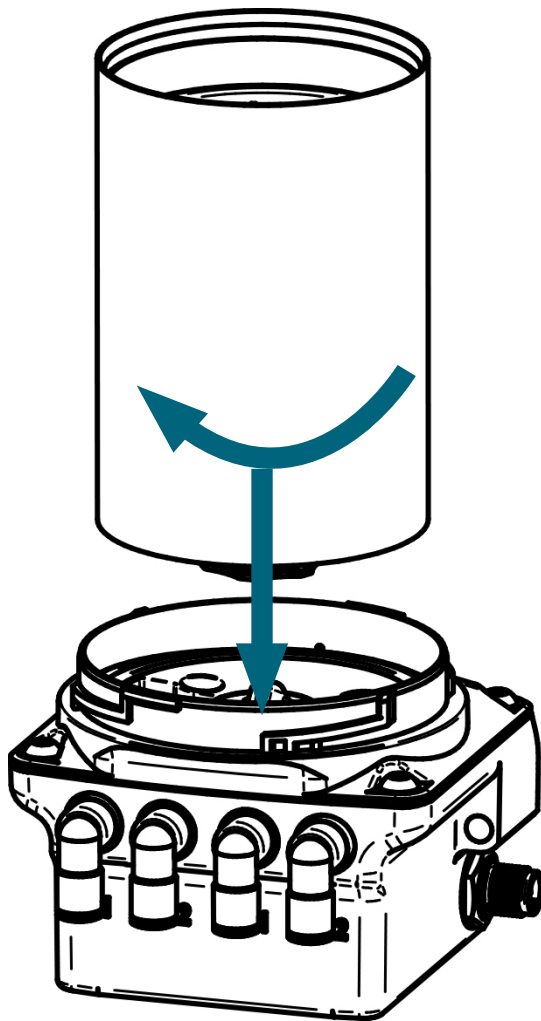

- Place the full lubricant cartridge on the FlexxPump 250/400 DLS.
- Turn the lubricant cartridge clockwise onto the FlexxPump 250/400 DLS.

ⓘ The end position is reached after two full rotations when the label of the lubricant cartridge is aligned with the front label of the FlexxPump 250/400 DLS.

#### 5. Assembling the housing on the power unit of the FlexxPump 250/400 DLS.

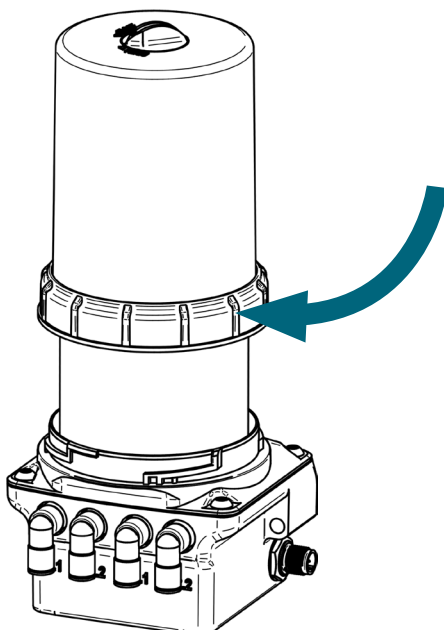

- Place the dismantled housing on the FlexxPump 250/400 DLS and press it onto the power unit.
- Fasten the housing to the power unit by turning the retaining ring clockwise.

ⓘ The retaining ring must snap into place when turning and be completely tightened.

- Carry out the work as described above.
- ① If the empty state of the cartridge (Error E1) was reached during a dispensing cycle, it is automatically interrupted and continued automatically after completion of the work explained above.

### 9.3 Disposal

- When disposing the FlexxPump 250/400 DLS, empty or opened cartridges, observe the relevant national regulations in force.
- When disposing the FlexxPump 250/400 DLS, observe the relevant safety data sheets and disposal instructions for the individual components.
- ① It is not possible to refill empty lubricant cartridges.



## 10. Released accessories

The present FlexxPump 250/400 DLS can be considerably extended by the extensive system and accessory program. This may necessitate changes to the PLC program, which controls the FlexxPump 250/400 DLS to ensure reliable and proper operation of the FlexxPump 250/400 DLS together with the hydraulically connected accessories.

| part-no.    | description   | usage   |
|-------------|---|---|
| 000-101-105 | cartridge FlexxPump 400 DLS, 400 cm <sup>3</sup> , F01              | adhesive grease for open gears                                      |
| 000-102-105 | cartridge FlexxPump 400 DLS, 400 cm <sup>3</sup> , F02              | H1-approval for linear guides and ball screws                       |
| 000-103-105 | cartridge FlexxPump 400 DLS, 400 cm <sup>3</sup> , F03              | universal grease for linear guides and ball screws                  |
| 000-104-105 | cartridge FlexxPump 400 DLS, 400 cm <sup>3</sup> , F04              | multi-purpose grease for rolling bearings                           |
| 000-114-105 | cartridge FlexxPump 400 DLS, 400 cm <sup>3</sup> , F14              | high performance universal grease for linear guides and ball screws |
| 000-101-103 | cartridge FlexxPump 250 DLS, 250 cm <sup>3</sup> , F01              | adhesive grease for open gears                                      |
| 000-102-103 | cartridge FlexxPump 250 DLS, 250 cm <sup>3</sup> , F02              | H1-approval for linear guides and ball screws                       |
| 000-103-103 | cartridge FlexxPump 250 DLS, 250 cm <sup>3</sup> , F03              | universal grease for linear guides and ball screws                  |
| 000-104-103 | cartridge FlexxPump 250 DLS, 250 cm <sup>3</sup> , F04              | multi-purpose grease for rolling bearings                           |
| 000-114-103 | cartridge FlexxPump 250 DLS, 250 cm <sup>3</sup> , F14              | high performance universal grease for linear guides and ball screws |
| 134-002-003 | Cable M12x1; straight plug; 4-pin; open end; 5 m                    |   |
| 134-002-007 | Cable M12x1; straight plug; 4-pin; open end; 10 m                   |   |
| 134-002-014 | Cable M12x1; with integrated LED; angled plug; 4-pin; open end; 5 m |   |
| 134-002-015 | Cable M12x1; with integrated LED; angled plug; 4-pin; open end; 10m |   |

|             |   |                        |
|-------------|---|------------------------|
| 134-002-029 | Cable M12x1; angled plug;<br>4-pin; open end; 5 m     |                        |
| 134-002-030 | Cable M12x1; angled plug;<br>4-pin; open end; 10m     |                        |
| on request  | Splitter: 2 to 4 outlets                              | multipoint lubrication |
| on request  | Aluminium progressive distributor: 2 to 10<br>outlets | multipoint lubrication |

## 10.2 Lubricants

Only use lubricants approved by the manufacturer DLS Schmiersysteme GmbH in the original cartridges developed and manufactured exclusively for FlexxPump 250/400 DLS.



### NOTICE

**The lubricant used in each case differs according to the application. The respective designation can be found on the label of the cartridge.**


Further information on lubricants, documentation and safety data sheets can be obtained directly from the manufacturer DLS Schmiersysteme GmbH.

## 10.1 Tube lengths

In principle, the recommendation is to install the FlexxPump 250/400 DLS as close as possible to the consumer (lubrication point). Ideally, this should be done directly at or on the lubrication point. In cases where this is not possible due to the installation space or for reasons of reachability or accessibility, tubes can also be used between the FlexxPump 250/400 DLS and the lubrication point (or distributor).

If the case arises that you cannot mount the FlexxPump 250/400 DLS directly at the lubrication point, contact the manufacturer to verify your application. The influence of temperature, the grease used, the hoses and accessories used does not allow a general statement to be made about the possible hose length on the FlexxPump 250/400 DLS.

11. Appendix  
11.1 Dimension sheet and installation dimensions

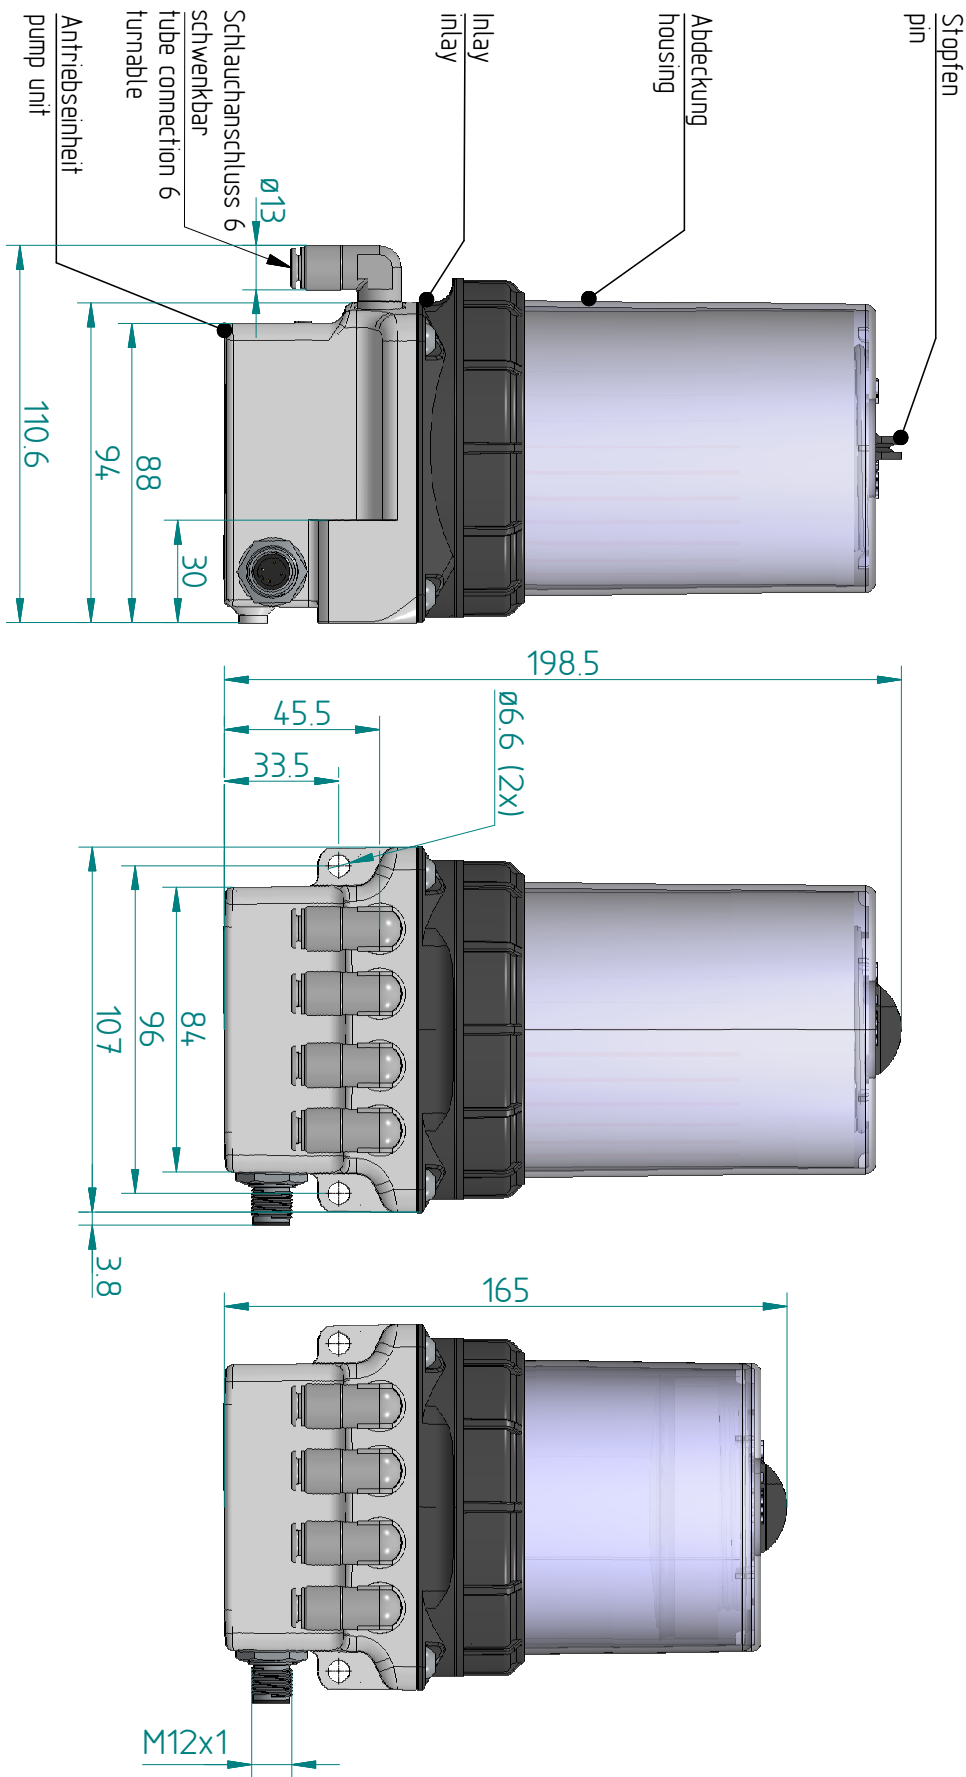

## 11.2 EC/EU Declaration of conformity



### Declaration of EG conformity

**According to the Machinery Directive 2006/42/EG, 17. Mai 2006**

Herewith the manufacturer  
DLS Schmiersysteme GmbH, Gewerbering 5, D-82140 Olching  
declares that the following lubricating systems

**FlexxPump 400 DLS / 24 V / B with 400 cm<sup>3</sup> respectively 250 cm<sup>3</sup> (1 – 4 outlets)**  
**FlexxPump 500 DLS / 24 V with 400 cm<sup>3</sup> (1 – 4 outlets)**

Delivered by us, concerning design and construction as well as the model put into circulation,  
comply with the EG directives 2006/42/EG.

In particular, the following harmonized standards were applied:

EN 12100:2011-03 Safety of Machinery

**According the EG directive on Electromagnetic Compatibility 2014/30/EU**

The manufacturer herewith declares that the following lubricating systems

**FlexxPump 400 DLS / 24 V / B with 400 cm<sup>3</sup> respectively 250 cm<sup>3</sup> (1 – 4 outlets)**  
**FlexxPump 500 DLS / 24 V with 400 cm<sup>3</sup> (1 – 4 outlets)**

Delivered by us, concerning design and construction as well as the model put in circulation,  
comply with the above-mentioned EU directive.

In particular, the following harmonized standards were applied:

EN 61000-6-2, EN 61000-6-4 Electromagnetic Compatibility (EMC)

Authorized representative for the compilation of technical documentation:


Reiner Hochholzer  
General Manager  
DLS Schmiersysteme GmbH  
Gewerbering 5  
D-82140 Olching

Olching, 12.02.2020

Reiner Hochholzer; General Manager

DLS Schmiersysteme GmbH  
Gewerbering 5  
D-82140 Olching  
+49 8142 650 690  
+49 8142 650 6929  
www.dls-schmiersysteme.de

### 11.3 Flowchart Control signal 2 seconds (for PLC)

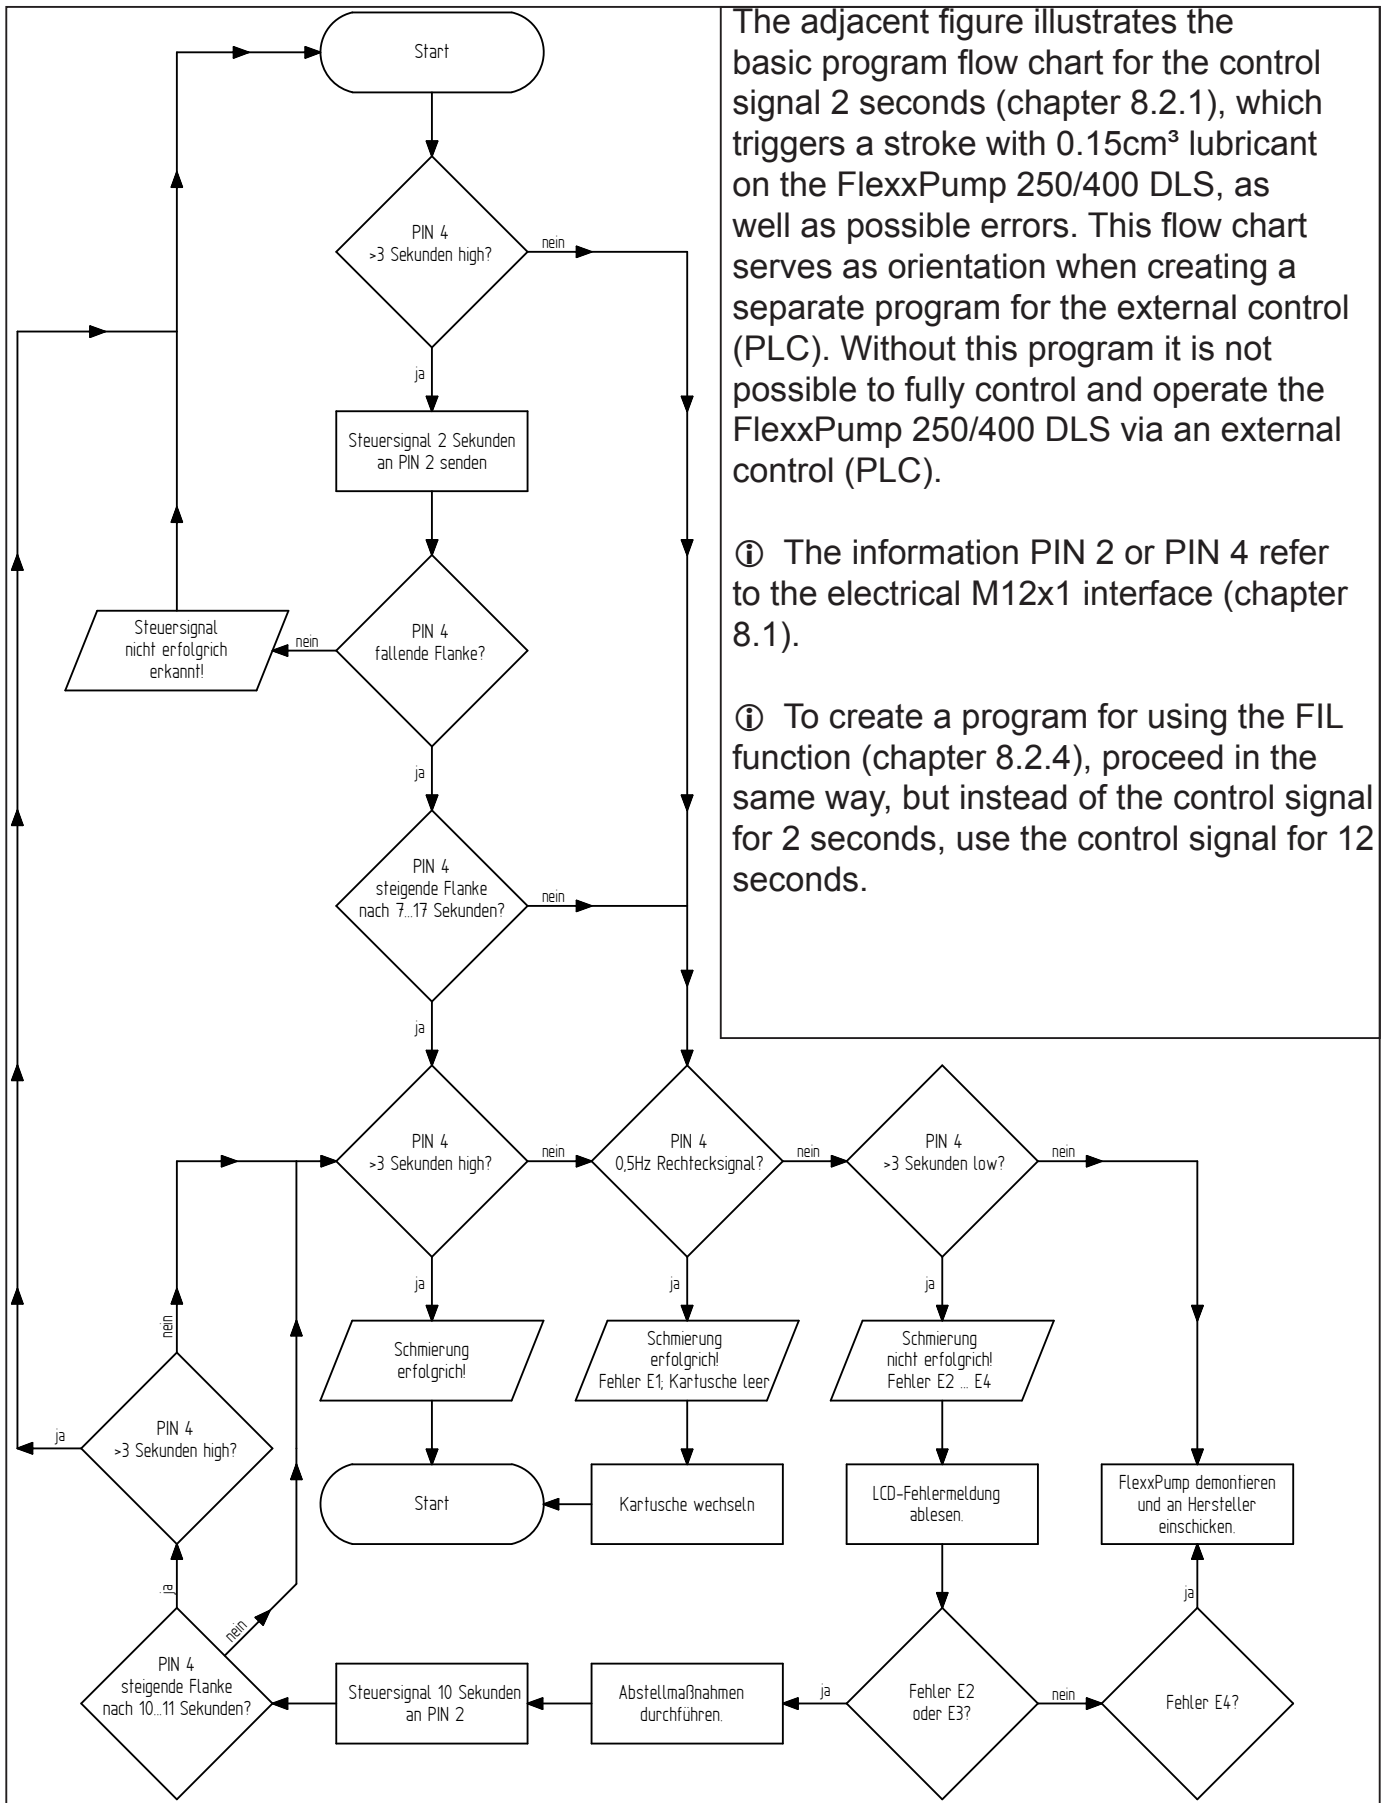

A large, light-colored gear is positioned in the background, spanning most of the page. The gear has a textured, metallic appearance. The background transitions from white at the top to a dark teal at the bottom.

# DLS

## SCHMIERSYSTEME

---

DIRECT LUBRICATION SYSTEMS

DLS Schmiersysteme GmbH  
Gewerbering 5  
D-82140 Olching  
Tel: +49-(0)8142 650 69-0  
Fax: +49-(0)8142 650 69-29  
mail@ DLS-Schmiersysteme.de  
www.DLS-Schmiersysteme.de